 


# **METTLER TOLEDO**

## **DIVA Operation Manual**

### **NCR RealScan 7872 Scanner**

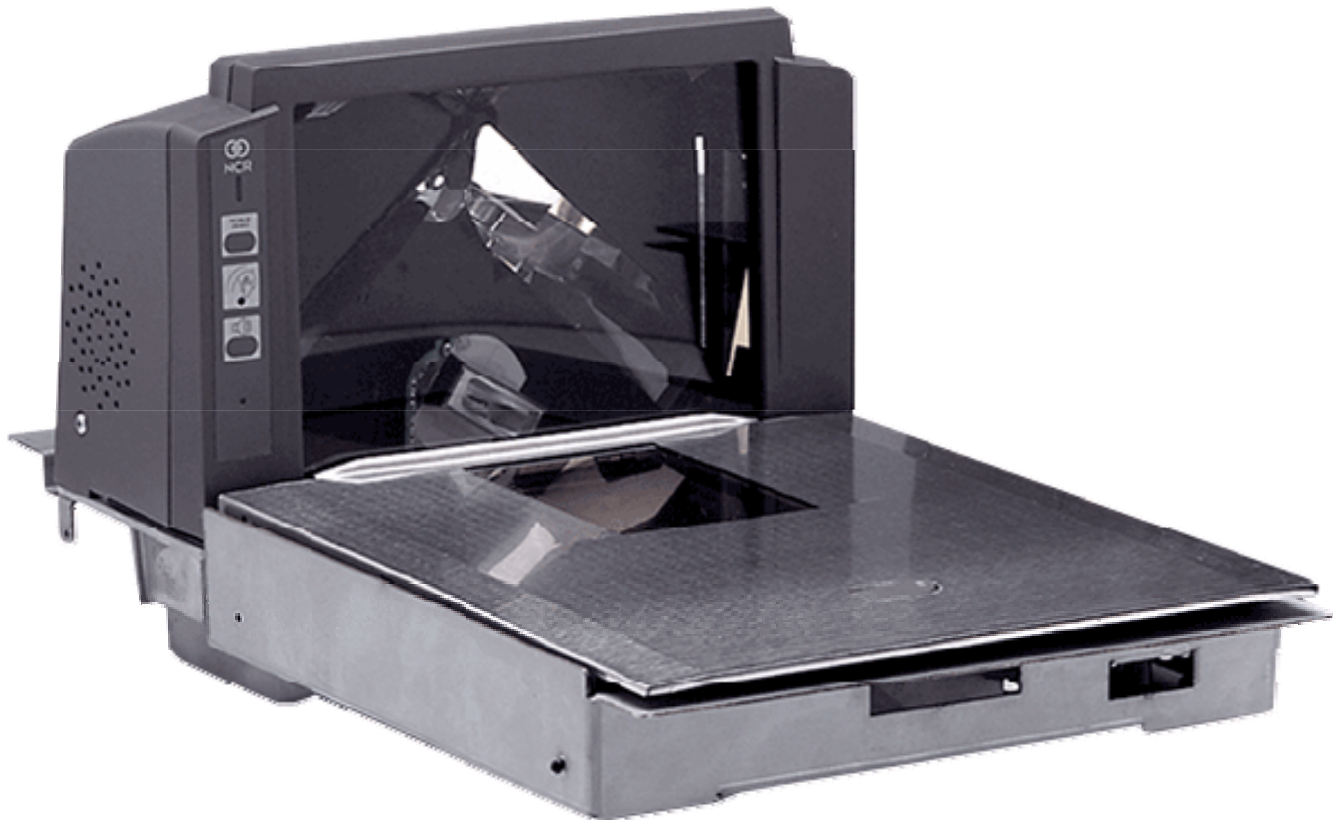

## **INTRODUCTION**

This publication is solely as a guide for individuals who purchased the METTLER TOLEDO DIVA scale.

Information regarding METTLER TOLEDO Technical Training may be obtained by writing to:

**METTLER TOLEDO**  
1900 Polaris Parkway  
Columbus, Ohio 43240-2020  
(614) 438-4511

©Mettler-Toledo, LLC 2012

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Mettler-Toledo, LLC.

U.S. Government Restricted Rights: This documentation is furnished with Restricted Rights.



**METTLER TOLEDO RESERVES THE RIGHT TO MAKE REFINEMENTS  
OR CHANGES WITHOUT NOTICE.**

# Precautions



**READ this manual BEFORE operating or servicing this equipment.**

	 <b>WARNING</b>
	ONLY PERMIT QUALIFIED PERSONNEL TO SERVICE THIS EQUIPMENT. EXERCISE CARE WHEN MAKING CHECKS, TESTS AND ADJUSTMENTS THAT MUST BE MADE WITH POWER ON. FAILING TO OBSERVE THESE PRECAUTIONS CAN RESULT IN BODILY HARM.

**FOLLOW these instructions carefully.**

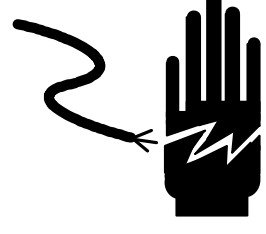	 <b>WARNING</b>
	FOR CONTINUED PROTECTION AGAINST SHOCK HAZARD CONNECT TO PROPERLY GROUNDED OUTLET ONLY. DO NOT REMOVE THE GROUND PRONG.

**SAVE this manual for future reference.**

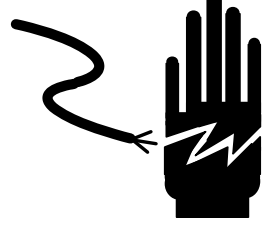	 <b>WARNING</b>
	DISCONNECT ALL POWER TO THIS UNIT BEFORE REMOVING THE FUSE OR SERVICING. FAILURE TO DO SO MAY RESULT IN BODILY INJURY OR PROPERTY DAMAGE.

**DO NOT allow untrained personnel to operate, clean, inspect, maintain, service, or tamper with this equipment.**

 <b>CAUTION</b>	
BEFORE CONNECTING/DISCONNECTING ANY INTERNAL ELECTRONIC COMPONENTS OR INTERCONNECTING WIRING BETWEEN ELECTRONIC EQUIPMENT ALWAYS REMOVE POWER AND WAIT AT LEAST THIRTY (30) SECONDS BEFORE ANY CONNECTIONS OR DIS-CONNECTIONS ARE MADE. FAILURE TO OBSERVE THESE PRECAUTIONS COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT OR BODILY HARM.	

**ALWAYS DISCONNECT this equipment from the power source before cleaning or performing maintenance.**

 <b>CAUTION</b>	
OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES.	

# Contents

---

<b>INTRODUCTION</b> .....	<b>1</b>
<b>DIMENSIONS</b> .....	<b>5</b>
<b>INSTALLATION</b> .....	<b>6</b>
ENVIRONMENT .....	6
CONTENTS OF PACKAGING .....	6
SETUP .....	6
<b>DISPLAY AND KEYBOARD</b> .....	<b>9</b>
DISPLAY .....	9
KEYBOARD .....	10
CURSORS .....	10
<b>OPERATIONS</b> .....	<b>11</b>
WEIGHING AND COMMUNICATION .....	11
BACKLIGHT FUNCTION .....	11
RE-ZERO FUNCTION .....	11
TARE FUNCTION .....	11
<b>SETUP</b> .....	<b>12</b>
SETUP SOFT SWITCHES .....	13
SOFT SWITCHES – DEFAULT SETTINGS .....	15
<b>APPENDIX</b> .....	<b>16</b>
ERRORS .....	16
CLEANING AND MAINTENANCE .....	16
SPECIFICATIONS .....	17
<b>ACCESSORIES</b> .....	<b>19</b>

# Introduction

Please read this instruction manual carefully. This manual is intended for use with all DIVA Weigh Only and Price Computing scales.

The DIVA scale is combined with a scanner for full-featured Checkout applications. The DIVA scale is a high precision weighing instrument. It is designed for applications where product is sold directly to customers and must be approved by local Weights and Measures officials.

All equipment is assembled, tested and packed with great care. If you find something that does not meet your expectations, please contact METTLER TOLEDO immediately.

This scale will provide years of accurate weighing if properly used and maintained. Please handle it as you would any piece of sensitive electronic equipment.

## GEO-Value

 
The GEO-Value of verified scales explains for which location of use the scale has been verified. This GEO-Value is shown on the weight display shortly after power is applied to the scale.

Country	Geo-Width	Geo-Value (default)
Austria	46°22' – 49°01'	18
Belgium	49°30' – 51°30'	20
Bulgaria	41°41' – 44°13'	16
Croatia	42°24' – 46°32'	18
Czechia	48°34' – 51°03'	20
Denmark	54°34' – 57°45'	23
France	41°20' – 51°00'	19
Finland	59°48' – 70°05'	25
Germany	47°00' – 55°00'	20
Greece	34°48' – 41°45'	15
Hungary	45°45' – 48°35'	19
Ireland	51°05' – 55°05'	22
Iceland	63°17' – 67°09'	26
Italy	35°47' - 47°05'	17
Latvia	55°30' – 58°04'	23
Luxembourg	49°27' – 50°11'	20
Liechtenstein	47°03' – 47°14'	18
Lithuania	53°54' – 56°24'	22
Netherland	50°46' – 53°32'	20
Norway	57°57' - 71°11'	24
Poland	49°00' – 54°30'	21
Portugal	36°58' – 42°10'	15
Romania	43°37' – 48°15'	18
Sweden	55°20' – 69°04'	24
Switzerland	45°49' – 47°49'	18
Slovakia	47°44' – 49°46'	19
Slovenia	45°26' – 46°35'	18
Spain	36°00' – 43°47'	15
Turkey	35°51' – 42°06'	16
United Kingdom	49°00' – 62°00'	21



FOR YOUR NOTES:

Declaration of Conformity  
 Konformitätserklärung  
 Déclaration de conformité  
 Declaración de Conformidad  
 Conformanceverklaring  
 Dichiarazione di conformità

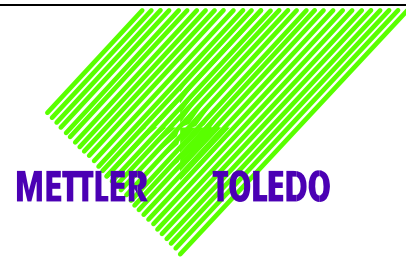

We/Wir/Nous/Nosotros/Noi

**Mettler-Toledo (ChangZhou) Scale & System Ltd.**  
 111 ChangXi Road, ChangZhou, JiangSu, 213001, P.R.China

**declare under our sole responsibility that the product,**  
 erklären, in alleiniger Verantwortung, dass dieses Produkt,  
 déclarons sous notre seule responsabilité que le produit,  
 declaramos, bajo nuestra sola responsabilidad, que el producto,  
 verklaren onder onze verantwoordelijkheid, dat het product,  
 dichiariamo sotto nostra unica responsabilità, che il prodotto,

**Model/Type: DIVA**

**To which this declaration relates , is in conformity with the following standard(s) or other normative document(s),**  
 auf das sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder Richtlinie(n) übereinstimmt.  
 Auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x) document(s) normatif(s).  
 Al que se refiere esta declaración es conforme a la(s) norma(s) u otro(s) documento(s) normativo(s).  
 Waarnaar deze verklaring verwijst, aan de volende norm(en) of richtlijn(en) beantwoordt.  
 A cui si riferisce questa dichiarazione è conforme alla/e seguente/i norma/e o documento/i normativo/i.

EC Marking	EC Directive:	Applicable Standards:
	73/23/EEC Low Voltage Directive	EN60950
	89/336/EEC EMC Directive	EN61326:1997+A1+A2 (Class B) EN61000-3-2 EN61000-3-3
<i>For non-automatic weighing instrument used in an Article 1,2.(a) application ,additional metrological marking according to Annex IV of Council Directive 90/384/EEC must be attached to the instrument</i>		
year 0103	90/384/EEC Non-automatic Weighing Instruments Directive	EN45501 1)

 
- 1) valid only for "DIVA" base in connection with approved terminal.  
 zulässig nur für "DIVA" Waage zusammen mit zugelassenem Terminal  
 valid only for la base "DIVA" dans connection with approved le terminal  
 válido solamente para la base "DIVA" en la conexión con el terminal aprobado.  
 valido soltanto per la base "DIVA" in relazione al terminale approvato.

ChangZhou, April 2006

Mettler-Toledo (ChangZhou) Scale & System Ltd.

Yang JiaWu, Quality Assurance Manager

**Important notice for verified weighing instruments**

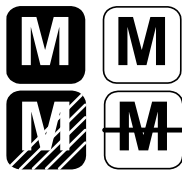

Weighing Instruments verified at the place of manufacture bear the preceding mark on the packing label and a green "M" sticker on the descriptive plate. They may be set to work immediately.

Weighing Instruments which are verified in two steps have no green "M" on the descriptive plate and bear the preceding identification mark on the packing label. The second step of the verification must be carried out by the approved Mettler-Toledo service or by the W&M authorities. Please contact your Mettler-Toledo organization.

The first step of the verification has been carried out at the manufacturing plant. It comprises all tests according to EN 45501-8.2.2. If national regulations in individual countries limit the period of validity of the certification, the operator of such a scale is himself responsible for its timely re-certification.

**Wichtiger Vermerk für geeichte Wäginstrumente in EU-Ländern**



Werksg geeichte Waagen tragen vorstehendes Kennzeichen auf dem Packetikett und einen grünen "M"-Kleber auf dem Eichschild. Sie dürfen sofort in Betrieb genommen werden.

Waagen, die in zwei Schritten geeicht werden und kein grünes "M" auf dem Eichschild haben, tragen vorstehendes Kennzeichen auf dem Packetikett. Der zweite Schritt der Eichung ist durch den behördlich anerkannten Mettler-Toledo Kundendienst oder durch den Eichbeamten durchzuführen. Bitte nehmen Sie mit dem Mettler-Toledo Kundendienst Kontakt auf.

Der erste Schritt der Eichung wurde im Herstellerwerk durchgeführt. Er umfasst alle Prüfungen gemäß EN45501-8.2.2. Sofern gemäß den nationalen Vorschriften in den einzelnen Staaten die Gültigkeitsdauer der Eichung beschränkt ist, ist der Betreiber einer solchen Waage für die rechtzeitige Nacheichung selbst verantwortlich.

**Remarque Importante pour les Instruments de pesages vérifiés dans les pays membre de l'Union Européenne**



Les instruments de pesage vérifiés en usine portent l'identification ci-contre sur leur emballage et un autocollant "M" vert sur la plaque d'identification. Ils peuvent être utilisés après leur installation.

Les instruments de pesage vérifiés en deux étapes portent l'identification ci-contre sur leur emballage et n'ont pas d'autocollant "M" vert sur la plaque d'identification. La seconde étape de la vérification doit être effectuée par le service technique Mettler-Toledo autorisé responsable. Veuillez s.v.p. contacter le service technique Mettler-Toledo.

La première étape de la vérification a été effectuée en usine. Cela comprend tous les essais suivant la norme EN45501-8.2.2. Dans la mesure où la durée de la vérification est limitée en fonction des prescriptions nationales dans les différents pays, l'utilisateur d'une telle balance est lui-même responsable de la vérification ultérieure dans les délais.

**Nota importante para básculas verificadas en países de la UE**

 


Las balanzas verificadas en origen llevan esta indicación en la etiqueta del embalaje y con la etiqueta "M" sobre fondo verde en la placa de características pueden ser utilizadas inmediatamente.

Balanzas cuya verificación se realiza en dos fases llevan esta indicación en la etiqueta del embalaje (ninguna etiqueta "M" verde en la placa de características). La segunda fase de la verificación debe ser realizada por personal Mettler-Toledo acreditado, o por la autoridad competente. Rogamos contacten con el Servicio Técnico de Mettler-Toledo.

La primera fase de la verificación ha sido realizada en origen. Incluye todos los ensayos según lo norma EN45501-8.2.2. Si el plazo de validez de la verificación está limitado por las normas nacionales de cada estado, el usuario será responsable de las verificaciones posteriores reglamentarias de su balanza.

**Nota Importante per la balance approvate nei paesi UE**

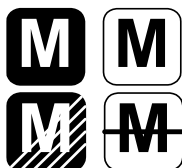

Le balance verificate in fabbrica portano questo contrassegno sull'etichetta dell'imballo e con il sigillo "M" su stando verde sulla targhetta metrological possono essere messe in uso immediatamente.

Le balance che vengono verificate in due fasi, portano questo contrassegno sull'etichetta dell'imballo e non portano il sigillo "M" sulla targhetta metrological. La seconda fase della verifica dev'essere eseguita dal servizio assistenza Mettler-Toledo autorizzato, oppure dalla autorità competente. Prego contattate il vostro servizio assistenza Mettler-Toledo.

La prima fase della verifica è stata eseguita dal produttore e comprende tutte le prove previste dalla norma EN 45501-8.2.2. Se la durata di validità della verifica è limitata in accordo con le prescrizioni nazionali vigenti nei singoli paesi, l'utilizzatore stesso di una bilancia di tale tipo sarà responsabile dell'esecuzione, entro le date di scadenza previste, delle verifiche periodiche.



# Dimensions



**Price Computing Display**



**Weight Only Display**

# Installation

## Environment

Before you install your DIVA scale please keep in mind the following factors, which might have a negative influence on the scales' operation:

- Vibration diminishes the scale's ability to measure accurately. Excessive vibration from equipment such as conveyors can cause inaccurate and non-repeatable readings.
- Be sure the scale is leveled properly.
- Air currents can also diminish the scale's performance. Avoid placing the scale in front of or directly under air vents.
- Other than items being weighed, keep the scale free from objects rubbing or pressing against the platter.

## Contents of Packaging

 
Package contents for all DIVA units include:

- DIVA scale base
- Operation Manual
- Display cable
- Tower included and attachment hardware (The optional display may be packed separately)
- Communication cable to ECR
- Sealing Kit

## Setup

1. Open the box, carefully remove the packing material, and take all items out of the carton.
2. Attach the display as described below, depending on which version of scale you ordered:

### For Price Computing Version:

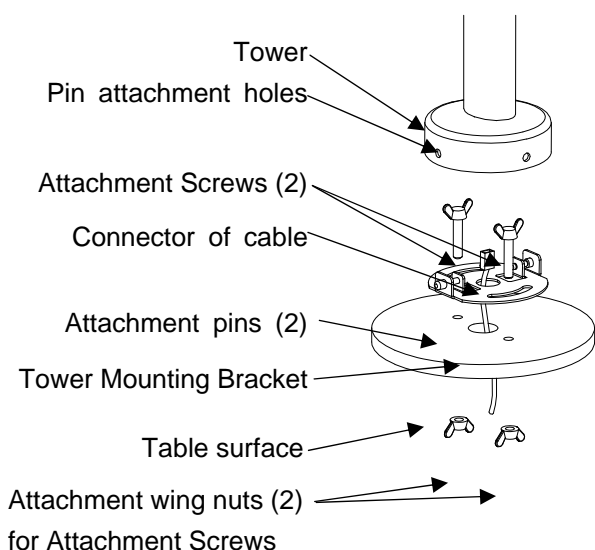 


- A: Pull the connector of the cable through the holes of the table surface and tower mounting bracket
- B: Put (2) screws through the (2) arch holes on the bracket and (2) holes on the table surface
- C: Attach cover to the surface of table with (2) nuts
- D: Connect the cable to the connector at the bottom of the tower display
- E: Attach the base of the display to the mounting bracket by insuring that the (2) pins on the bracket are inserted in the holes of the base to attach the tower and snap the tower into place

**For Weigh Only Version:**

The Weigh Only version comes with a tower mount.

Assemble the Weigh Only tower as is illustrated here:

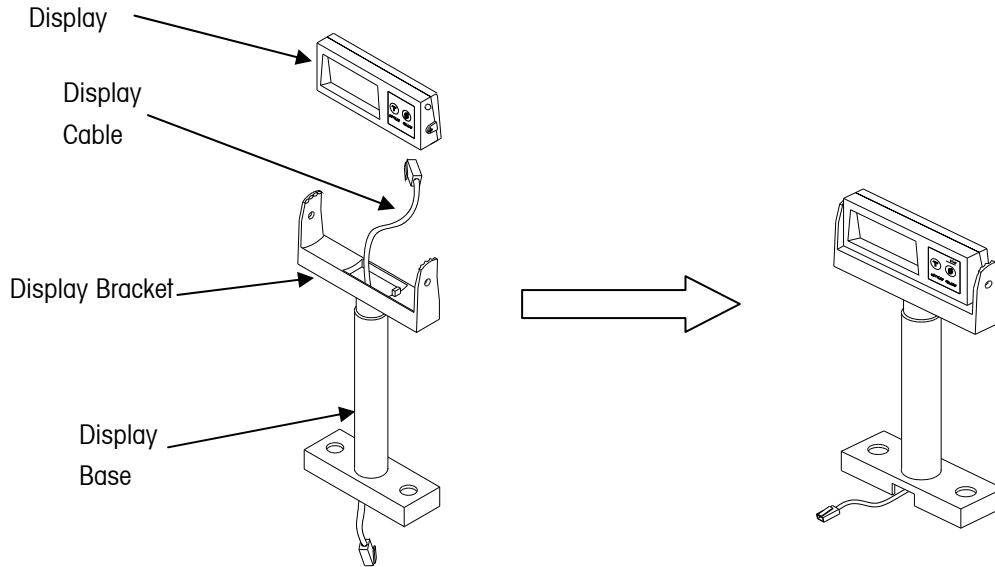

- Set the scale base on a sturdy, level surface. Level the scale by turning the adjustable feet on the bottom of the unit. Adjust the feet until the level bubble is in the center of the circle.

Bubble indicator:

Correct



Wrong



- Put the platter on top of the DIVA scale base.
- Connect the tower display cable to the scale.
- Attach the power harness.
- Connect the communication cable to the scale. (See the Installation Manual for detailed instructions)

## Power up sequence

**Note: Before powering on the DIVA scale, always make sure there is nothing on the platter.**

Apply power to the scanner. The scale will go through a series of self-tests and then will proceed to normal operating mode. The power-up sequence is as follows:

- All segments of the display characters are lit\*. This verifies operation of all segments.
- The scale displays the country code and GEO code, software part number and revision.
- The scale then captures zero and is ready for normal operation.

 
\*If the display does not light up correctly the scale could be set up for a different (WO or PC) display. To change the scale to the correct display type hold down the tare button on the display while recycling power.



# Display and Keyboard

## Display

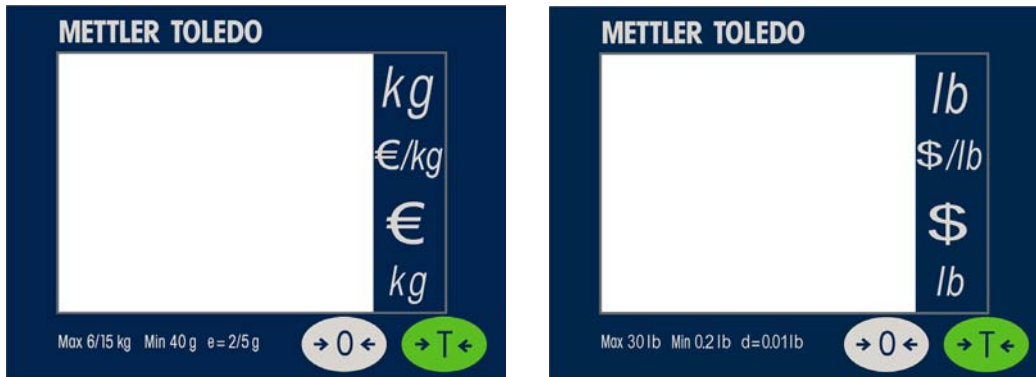

Price Computing Version:



Weight Only Version:

 


## Keyboard

	Used to return the scale to gross zero if drifting should occur.
	Tare key.

## Cursors

NET	Lights when tare is entered.
Zero	Lights when gross weight is zero.

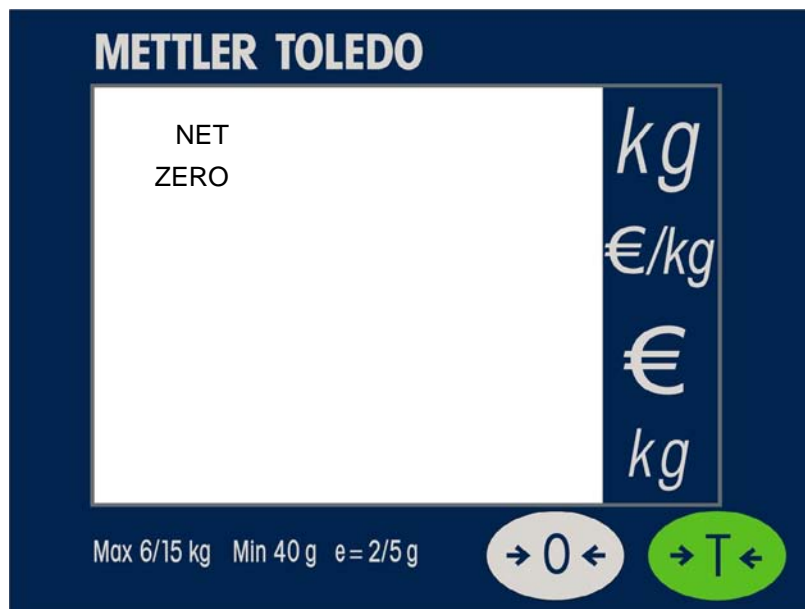

# Operations

---

## Weighing and Communication

Place the item to be weighed on the platter. The weight will be displayed.

Remote ASCII commands can control all other functions including data transfer, zero, and tare, depending on the protocol.

## Backlight function

DIVA is equipped with a backlight for the display. To switch on the backlight, press and hold the "ZERO" key for about 3 seconds until the backlight turns on. Use the same procedure to switch the backlight off.

## Re-zero function

There are two ways to re-zero the scale:

1. Power-up Zero
2. Push button Zero

### Power-up Zero

The scale will automatically capture zero when it is turned on. The power-up zero capture range is +/-10% of the scale capacity. When the scale is turned on with a weight on the platter of more than +/-10% of the scale's capacity, the scale will not capture zero (the weight display will show "----") and the scale will not be ready for use. After removing the weight the scale will capture "zero".

### Push button Zero

The ZERO key re-zeros the scale over a range of +/-2% of the scale capacity. To use this function, the scale must be in the gross weighing mode (NET cursor must be off) and in a non-motion condition. When the weight on the platter is more than +/-2% of the scale's capacity, the depression of the zero key will not be accepted.

## Tare Function

The Tare Key allows you to subtract weight from the platter for items like containers that will be used to hold the item being weighed.

Place the empty container or wrapping material on the platter and press the Tare Key.


Place the item to be weighed in the container or on the wrapping material and onto the platter.

Note: A Tare command can be sent from a POS through the DIVA serial connection. Whatever method is used to start a transaction must continue to be used until the transaction is over. If the push button is used first, a remote tare command will not work. Conversely, if a remote tare is used then the push button will not work until the transaction is complete and the scale has returned to zero.

# Setup

---

This mode allows an operator to change certain soft switches directly from the keyboard.

Press and hold the  key until “grP 1” and “CONF” is displayed. This will take about 8 seconds. The scale is configurable for your specific needs with a special interactive set up procedure. In order to access the various prompts, you must utilize the following keys during the scale setup mode.



This key is used to confirm the choice and then go to the next step



This key is used to step through the set up groups. Once a group is accepted, this key is used to select the soft switch settings



## Setup Soft Switches

Group.Step	Function	Possible Selections
<b>Group 1</b>		
1.3	Beeper	<b>0</b> – Beeper will not sound at any time <b>1</b> – Scale will not “beep” when a key is pressed <b>2</b> – Scale will not sound when a key is pressed, but it will “beep” when sending command of NCI-ECR <b>3</b> – Scale will sound when a key is pressed, and it will “beep” when sending command of NCI-ECR
1.4	Zero Cursor	<b>ON</b> – Display zero cursor. <b>OFF</b> – Disable zero cursor.
1.5	Decimal point	<b>ON</b> - . <b>OFF</b> - ,
<b>Group 2</b>		
2.1	Tare Enable	<b>ON</b> – Enables tare function <b>OFF</b> – Disables tare function
2.2	Chain Tare Enable	<b>ON</b> – Enables multiple tares <b>OFF</b> – Only one tare per transaction is allowed
2.7	Display (1 or 4 Line)	<b>0</b> – None <b>1</b> – 1 Line <b>2</b> – 4 Line
2.8	Display Update Rate	<b>0-100</b> – Adjust display rate
Group.Step	Function	Possible Selections
<b>Group 3</b>		
3.1	Baud rate	<b>0</b> = 1200 <b>1</b> = 2400 <b>2</b> = 4800 <b>3</b> = 9600
3.2	Parity	<b>0</b> = None <b>1</b> = Even <b>2</b> = Odd
3.3	Data	<b>0</b> = 7 data bit <b>1</b> = 8 data bit
3.4	Bit stop	<b>0</b> = None <b>1</b> = 1 stop bit <b>2</b> = 2 stop bit
3.5	Chose Protocol	<b>0</b> = Disabled <b>1</b> = NCI-ECR (WO) <b>2</b> = (reserved) <b>3</b> = 8217 Mettler-Toledo (WO) <b>4</b> = 8213 Mettler-Toledo (WO) <b>5</b> = EPOS 1 (WO) <b>6</b> = EPOS 2 (WO) <b>7</b> = (reserved) <b>8</b> = Dialog 06 (PC) <b>9</b> = Dialog 04/02 (PC) <b>10</b> = Extended Dialog 06 (PC) <b>11</b> = ICL (WO) <b>12</b> = Shekel (WO) <b>13</b> = RIVA 5462 (WO) <b>14</b> = IP3 (PC) <b>15</b> = (reserved)

<b>EXIT</b>		
SAVE	Save or abort setting	<b>SAVE</b> – save all settings and return to weighing mode <b>ABORT</b> – abort all settings and return to weighing mode

\* **PC** - price computing version, **WO** - weigh only version.

# Soft Switches – Default Settings

Function	PC Germany/ (Europe)	France	USA	Austria	Spain/ Portugal	Belgium/ Poland/ England	Italy	Kazakhstan/ Swiss	Ukraine	Russia	Hungary	Slovakia	Czechia	General Export	China	Canada
Group 1																
1.3 Beeper	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
1.4 Zero Cursor	Off	Off	On	Off	Off	Off	Off	Off	Off	Off	On	Off	Off	On	On	On
1.5 Decimal Point	Off (.)	Off (.)	On (.)	Off (.)	Off (.)	Off (.)	Off (.)	Off (.)	Off (.)	Off (.)	On (.)	Off (.)	Off (.)	On (.)	On (.)	On (.)
Group 2																
2.1 Tare Enable	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
2.2 Chain Tare Enable	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
2.7 Display Type	2 (4Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)	1 (1Line)
2.8 Display Update Rate	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Group 3																
3.1 Baud Rate	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)	3 (9.6kb)
3.2 Parity	2(odd)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)	1(even)
3.3 Data Bits	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)	0 (7bits)
3.4 Stop Bit	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3.5 Protocol	8(Dialog06)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)	3(8217)

**PC – Price Computing, WO – Weigh Only**

## Appendix

### Errors

The DIVA will display an error message if a scale problem or incorrect keyboard entry is sensed. The possible error codes are:

E10	Generic error	Cycle power to the scale. For continued problems contact METTLER TOLEDO for additional assistance.
E 11	RAM error	
E 16	ROM error	
E 18	EEPROM error	
E 20	Calibration error	Cycle power to the scale and restart calibration.
E 28	Transmission error	Reset scale.
nnnnnn In weight display	Over capacity	Remove weight from Platter. If this does not work, try cycling the power to the scale. For continued problems contact METTLER TOLEDO for additional assistance.
nnnnnn in total price display	Over 9999.99	
uuuuuu In weight display	Under zero	Place the platter on the scale. Either press the Zero Key or cycle power to the scale. For continued problems contact METTLER TOLEDO for additional assistance.

### Cleaning and Maintenance

#### Daily Maintenance:

Wipe the display area and weighing platter with a clean, soft cloth with water or a mild glass cleaner. DO NOT use any types of industrial solvents or chemicals to clean the unit. These may damage the display and platter finish.

#### Weekly Maintenance:

Remove the platter and clean out all loose particles and debris from around the scale base and spider arms. This needs to be done at least once a month, although it is recommended that this maintenance be performed on a weekly basis.

Regular maintenance inspections by a qualified service technician are also recommended every six months.

#### General Maintenance:

- Disconnect power by removing the line cord or transformer from the wall outlet.
- DO NOT attempt to remove the cover or perform service or maintenance on the internal parts of the scale.
- Excess liquids spilled onto the scale should be removed and the scale cleaned immediately.

Note: After maintenance is performed on the scanner-scale unit, it is necessary to ensure proper weighing. Place a test weight on the unit and verify that the scale is able to get a stable weight and a correct reading.

## Specifications




Capacity	: 15 and 6kg Multi-Interval
Divisions	: 5 and 2 grams Multi-Interval
Weight display	: 5 digits
Unit price display	: 6 digits (price computing version only)
Total price display	: 6 digits (price computing version only)
Tare display	: 4 digits (price computing version only)
Operating temperature	: -10°C to +40°C
Storage temperature	: -25°C to +50°C
Plug in Power supply	: Power supplied via scanner power supply

Specifications are subject to change without notice.



FOR YOUR NOTES:

## Accessories

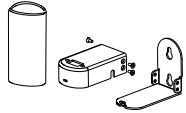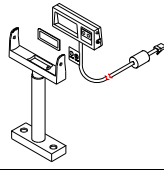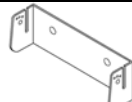CIMF	Description	Illustration
71208240	DIVA Wall Mount Display Accessory	
72191416	WO Dual Display Kit, 30X.01LB	
72191417	WO Dual Display Kit, 6/15kgX2/5g	
64055097	Weight Only Wall Mount Bracket	



**METTLER TOLEDO**  
1900 Polaris Parkway  
Columbus, Ohio 43240-2020

P/N: 72191205

METTLER TOLEDO® is a Trademark of Mettler-Toledo, LLC  
©2012 Mettler-Toledo, LLC