

## For Intrinsically Safe, Accurate Weighing in Hazardous Environments



## Hazardous Area Protection for Analog Load Cells

The METTLER TOLEDO Intrinsic Safety Barrier (ISB) for analog load cells is designed specifically for use in high accuracy/high resolution weighing applications. When installed in the load cell cable between a terminal in a safe area and analog load cells in a hazardous area, the ISB limits the energy delivered into the hazardous area to prevent ignition of a potentially explosive atmosphere.

The ISB features a redundant Zener diode design for full protection even if two diodes fail. When a fault condition occurs, the diodes conduct and blow a fuse, opening the circuit to the load cell(s). In addition, replaceable fuses protect the barrier against wiring errors during installation and service. These fuses can be replaced without removing wiring or connectors.

The METTLER TOLEDO ISB is available in two mounting configurations.

 The safe area version (ISB05 and ISB15) can be attached to any flat surface using four screws, or attached to a standard NS35 DIN rail using the built-in rail clasp.



The safe area ISB shown mounted to a DIN rail.

• The ISB05X and ISB15X models include NEMA type 7/9 flameproof enclosures, so they can be installed within hazardous areas.

Both configurations feature a tamper-proof, potted design and offer simple, fast installation.

(Note: Wiring from the terminal to the barrier is not intrinsically safe and must be installed per local regulatory code and guidelines.)

Specifications	ISB05	ISB15	ISB05X	ISB15X		
Physical Dimensions (W x D x H)	4.3 x 4.4 X 1.4 in (110 x 115 x 35 mm)		5.8 x 7.6 x 5.6 in (150 x 195 x 140 mm)			
Construction	Covers are ABS plastic		Cast aluminum alloy containing no more than 6% magnesium by weight			
Operating Voltage	0-5 VDC*	5-15 VDC*	0-5 VDC*	5-15 VDC*		
Environment	Dry, non-haz	ardous areas	Washdown; within hazardous areas			
Load Cells	Maximum of eight 350 ohm load cells (or equivalent load)					

\*The excitation must be unipolor. (The voltage must always be positive, never negative.) This barrier is NOT compatible with positive and negative "gated" load cell excitation.



METTLER TOLEDO offers load cell junction boxes, approved national pipe thread (NPT) to metric thread adapters and approved conduit-sealing fittings for quick, simple installation worldwide.

## **Approvals**

The ISB is the only intrinsic safe barrier designed for use in weighing applications with metrology approvals from Europe and the United States. It has been tested and approved by independent agencies (Factory Mutual and KEMA) to assure its safety. Depending on the specific approval and the load cells used, either a system or entity approval has been obtained. (The entity approval permits application of the barrier with METTLER TOLEDO load cells as well as with other brands.)

The suitability of this equipment for specific hazardous area classified locations is the responsibility of the customer/end user or his/her designate. The ISB barrier is sold as a safety-expendable device and is not warranted beyond its initial installation.

For intrinsically safe weighing equipment and accessories, count on METTLER TOLEDO – the global leader in weighing solutions for industrial, retail, and laboratory applications.



		TEL	FAX		TEL	FAX	
	Australia	(61-3) 9644 5700	(61-3) 9645 3935	Korea	(82-2) 518-2004	(82-2) 518-0813	Internet
	Austria	(43-1) 604 1980	(43-1) 604 2880	Malaysia	(603) 7041773	(603) 7031772	www.mt.com
<b>USA and Canada</b> 1900 Polaris Parkway Columbus, Ohio 43240	Belgium	(32-2) 334 0211	(32-2) 378 1665	Mexico	(52-5) 547 5700	(52-5) 541 2228	Specifications subject to change without notice.
	Brazil	(55-11) 421 5737	(55-11) 7295-1692	Netherlands	(31-344) 638363	(31-344) 638390	
	China (Industrial)	(86-519) 6642040	(86-519) 6641991	Norway	(47-22) 30 44 90	(47-22) 32 70 02	
	Croatia	(385-1) 23 36 317	(385-1) 23 04 147*	Poland	(48-22) 651 9232	(48-22) 651-7172	© 2001 Mettler-Toledo, Inc.
TEL. (800) 523-5123 (614) 438-4511 FAX (614) 438-4900	Czech Republic	(420-2) 254962	(420-2) 24247583	Russia	(7-095) 921 9211	(7-095) 921 6353	
	Denmark	(45-43) 27 08 00	(45-43) 27 08 28	Singapore	(65) 8900011	(65) 8900012	Printed in USA.
	France	(33-1) 30 97 17 17	(33-1) 30 97 16 16	Slovak Republic	(421-7) 43 42 74 96	(421-7) 43 33 71 90	
	Germany	(49-641) 50 70	(49-641) 52951	Slovenia	(386-61) 162 1801	(386-61) 162 1789*	
<b>Headquarters</b> 8606 Greifensee Switzerland	Hong Kong	(852) 27441221	(852) 27446878	Spain	(34-93) 223 2222	(34-93) 223 0271	
	Hungary	(36-1) 257 9889	(36-1) 256 2175	Sweden	(46-8) 702 50 00	(46-8) 642 45 62	
	India	(91-22) 857-0808	(91-22) 857-5071	Switzerland	(41-1) 944 45 45	(41-1) 944 45 10	
	Italy	(39-02) 333321	(39-02) 356-2973	Taiwan	(886-2) 2579-5955	(886-2) 2579-5977	5M0801
TEL. (41-1) 944 22 11 FAX (41-1) 944 30 60	Japan	(81-6) 6949-5901	(81-6) 6949-5944	Thailand	(66-2) 719 6480	(66-2) 719 6479	HAZARDOUS AREA
	Kazakhstan	(7-3272) 50 63 69	(7-3272) 60 88 35	United Kingdom	(44-116) 235 7070	(44-116) 236 6399 *Call for fax.	HA1013.0E