

Setting the Supervisor Password: Basic, Count, Count+, Smart+

In this demo we will use a Smart+ scale. The factory setting for the Supervisor password is empty, which means there is no password. The user password is always empty, so in the factory configuration the User and the Supervisor passwords are the same, which means the user can enter Supervisor setup.

To create a password for the Supervisor: Terminal / Password / Edit / (key in a password, 123 for example) / touch OK / Retype password / touch OK / End & Save.

Now the Supervisor password is 123.

END demo