




INSTALLATION INSTRUCTIONS for 5000TOC Sensor Pipe Mounting Kits

The 5000TOC Sensor can be mounted on either vertical or horizontal pipe. These kits consist of a mounting bracket, (4) mounting screws and (2) U-bolts with nuts of the size listed in the table. Referring to the illustration below, locate the U-bolts on the pipe, line up the bracket to the appropriate U-bolt size slots, install the nuts and tighten. Do not over tighten and deform the bracket. Mount the 5000TOC Sensor to the bracket with (4) #10-32 screws included with the kit.

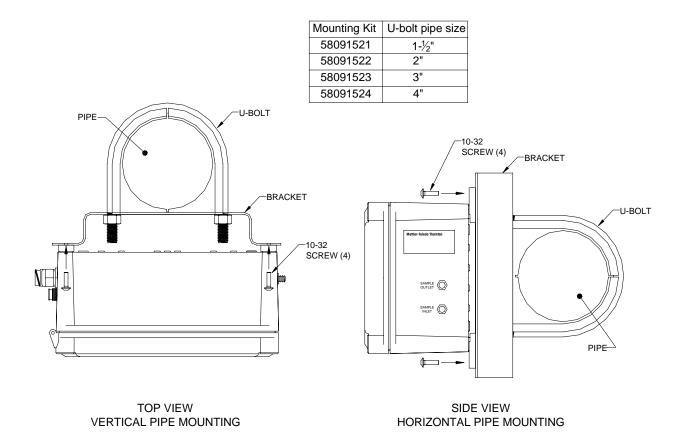

Mettler-Toledo Thornton, Inc. 36 Middlesex Turnpike Bedford, MA 01730 781-301-8600 www.thorntoninc.com Toll-Free: 800-510-PURE Fax: 781-271-0214 info@thorntoninc.com

84462 Rev. A 03/05