

# Accessory Cable GPro500


## ATEX, FM

This Quick Installation Guide for EMC Cable Shields affects cables with the order numbers:

Cable 5 m	30 077 735
Cable 10 m	30 077 736
Cable 15 m	30 077 737
Cable 40 m	30 422 256



Twist cable and fix end with tape.

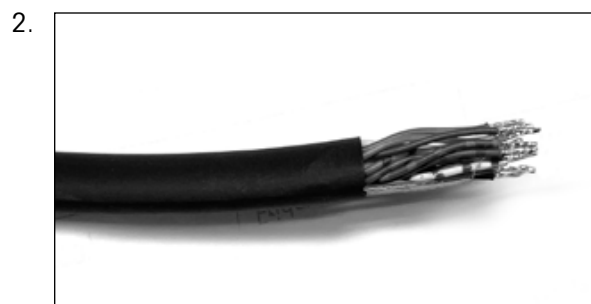

Insert cable into shrinking tube and remove tape from cable end. Leave 5 cm (1,97") of unsheathed wire for the connections.



Insert ground braid into shrinking tube.



Connect ring terminal to ground braid.



Shrink tube with hot air fan (approx. 10s at 400 °C {752 °F}).



Insert cable into lid and attach connectors.

For addresses of METTLER TOLEDO  
Market Organizations please go to:  
**[www.mt.com/pro-MOs](http://www.mt.com/pro-MOs)**

**[www.mt.com/pro](http://www.mt.com/pro)**

For more information



Management System  
certified according to  
ISO 9001/ISO 14001

**METTLER TOLEDO Group**  
Process Analytics  
Local contact: [www.mt.com/pro-MOs](http://www.mt.com/pro-MOs)

Subject to technical changes  
© 07/2021 METTLER TOLEDO  
All rights reserved. 30 688 761en A  
Printed in Switzerland

