# Manual labeling

# Compact and professional labeling



### Simple to use

All the Etica products have an extremely intuitive graphical interface. The self-explaining icons and menus simply guide operators through processes quickly. The full touch-screen interface allows customized keys for your specific application.



# Comprehensive

Like all other products in the range, the Etica 3300-H has a very wide array of features and satisfies the requirements of modern weighing-labelling applications in a commercial environment. In particular, it offers comprehensive and user-friendly tools for managing the traceability of fresh products.



# Print high quality labels

The Etica 3300-H has a built in label printer designed for high quality label printing for even more demanding barcode print like GS1-Databar, EAN128, PDF417 or QRCodes to ensure your customer satisfaction.



#### Compact and modern

The very compact Etica 3300-H can easily be integrated on counters or work stations, in workshops or retail areas. It may be integrated on a table for manual packaging with a stretch-film.



# Etica 3300-H

The Etica 3300-H is a manual weigh-price labeler offering a wide range of Prepack features. Its very compact size is perfect for integration on a manual packaging table in delicatessen, dairy or meat departments in all types of stores. As part of the Etica product line, it shares the common user interface. Operators effortlessly use the intuitive icons and menus to set up PLUs or design labels. Required changes are completed with just a few steps on the touch screen display. To meet your different customer demands, the compact integrated printer allows you to print large labels in high resolution and adapt quickly to new requests for traceability or additional ingredients specifications. Easily connectable to standard Ethernet network and handheld barcode scanners, the Etica 3300-H is the modern compact Prepack terminal.



#### Technical data

# Etica 3300-H

# Manual weigh-price labeling

#### **Application features**

Up to 30 000 PLU items 10 000 characters per ingredient list per PLU 255 tares, 4 programmable dates Weight and tare up to 5 characters Price per article up to 8 characters Price to pay up to 9 characters Libraries for texts, ingredients, and label layouts Integrated label editor

On screen help messages

Tracing incoming items with automatic barcode scan Effortless handling of a large amount of text through full screen display

Simple on screen methods for handling article relabeling, loss, return and cancellation Modes include variable weight/price, fixed weight and fixed price as well as piece and weight only articles Multiple country prices and languages Printing of labels with manual fixed weight entry Printing and reading of GS1 barcodes: Databar (RSS14), 128 (EAN128), EAN8, EAN13, UPC-A, UPC-E, ITF14, code 128, code 39, code 93, QRCode, PDF417...

#### Data management

Advanced statistical functions Configurable reporting capabilities Event logs

#### User interface

12.1" touch-sensitive screen (30.7 cm) Touchscreen with backlit LED technology Adjustable tilt angle Screen resolution: 800 x 600 pixels 32-bit color depth

#### Data storage


160 GB hard drive 1,024 MB RAM Limitless number of logos and label definitions

## Interfaces and host communication

Interfaces: RS232, Ethernet (10baseT) TCP/IP, 2 x USB Host communication through METTLER TOLEDO **ETITRANS** 

### Security

Menus password protected Data security by storing data on a removable disk Level defined operator access rights

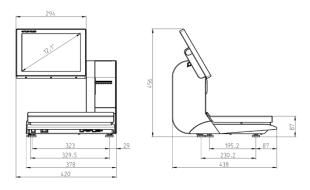

Weighing range	Readability	Min. weight	
6/15 kg	2/5 g	40 g	

#### **Printing**

Thermal direct Support Windows® fonts Support for various fonts and character sets (Cyrillic, Arabic, Chinese, Greek) Printing of multiple logos Label size max. 55x200mm Printable width 54mm Multi-directional printing Maximum role diameter 126mm Connection to external printers possible for specific needs

#### Remote maintenance and data communication

InTouch<sup>SM</sup> Remote Services FTP (File Transfer Protocol) VNC (Virtual Network Computing)

#### **Options**

External printers Handheld barcode scanners



ISO 9001 quality management certification ISO 14001 environmental management certification Internet: http://www.mt.com Worldwide service

Subject to technical changes ©04/2012 Mettler-Toledo EPEC Printed in Switzerland Ref: 292 30 712 - v1.0



For more information

