

GlassChek

X-ray Inspection System



Simplicity of Operation

Full color, high resolution touch screen gives you full control of the system without the need for a keyboard.



Sanitary Design

All Safeline x-ray systems meet sanitary design standards with AMI and 3A Dairy designs available as options.



Extreme Washdown Protection

Safeline's X-ray Inspection equipment withstands the harshest washdown environments through the use of proprietary sealing techniques.

Inspection of Jars

Safeline's GlassChek X-ray system provides outstanding contaminant detection in the most challenging jar geometries and product variations.

It's horizontal dual x-ray beam technology removes inspection blind spots in the base and side wall areas to insure the safety of your products.

With a small footprint, intuitive software, automatic product set-up, ease of data transfer and variable line speed inspection, Safeline's GlassChek can easily be installed on existing glass lines. Safeline's patented inspection software monitors any variations in glass thickness.


Technical data

GlassChek X-ray Inspection System

- **User Friendly**
- **Detection and elimination of contaminants such as metal, glass, stone, bone, and plastic**
- **Monitoring of products and jar attributes**

A superior range -

All models within Safeline's GlassChek systems are efficient, low-maintenance and easy to operate. All feature the same sophisticated technology to ensure maximum sensitivity and accuracy, whatever the application. This latest system from Safeline is designed to meet stringent food and pharmaceutical industry requirements. Quality is high as you would expect from METTLER TOLEDO SAFELINE, with standard machines being sealed to NEMA 12. NEMA 4X sealing is available as an option for use in particularly harsh environments including high pressure washdown.

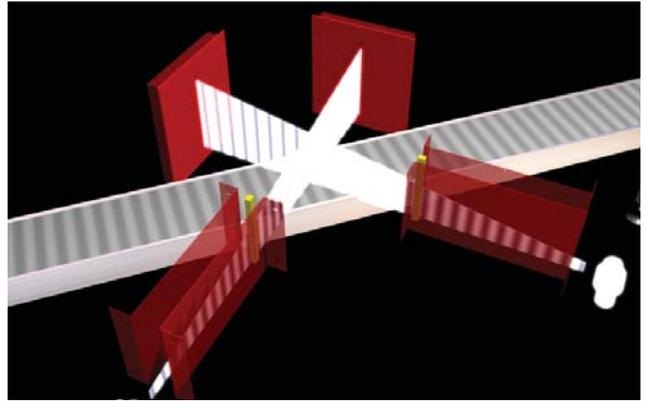

GlassChek X-ray Inspector Specifications

Core technology	Unique low energy technology for optimal sensitivity
Operating System	Windows XP
User Interface	15" Full color, touch screen display with real automatic set-up software - no keyboard required
Inspection Rate	Up to 500 feet / minute
Inspection Widths	300 and 400
Detector	High resolution linear array: available in 0.8mm standard diode and 0.4mm optional diode size
Inspection Software	Adaptive automatic product variation compensation
Power Requirements	220v ac, single phase, 50/60Hz, 3 phase optional
X-ray Generator	80Kv 4.5mA, 120Kv 3.0mA
Connectivity	External USB and Ethernet port
Sealing	Standard NEMA 12, optional NEMA 4X

Safeline - making your products safer.

Mettler-Toledo Safeline, Inc.

6005 Benjamin Road, Tampa, FL 33634

Toll Free 800-447-4439

Tel: 813-889-9500

Fax: 813-881-0840

Email: safeline.sales@mt.com

Subject to technical changes

© 2007 Mettler-Toledo Safeline, Inc.

Printed In the U.S.A.

www.mt.com/safelineus

Visit for more information