


0990 MONORAIL OVERHEAD TRACK SCALE

METTLER TOLEDO® 0990 Monorail Overhead Track Scale is ideal for beef, pork, and lamb operations that employ overhead rail material handling systems. The 0990 is a self-contained weighing assembly designed for fast, easy installation into a new or existing meat processing line. Having the scale installed directly in the overhead track line, streamlines your process by eliminating steps moving to and from a separate scale, giving you better control over product flow. The 0990 Monorail Overhead Track Scale consists of a suspended structure, available in epoxy painted mild steel or stainless steel, using industry standard meat rail. The 0990 features removable approach and exit rails, and a live weighing rail suspended by two hermetically sealed load cells, providing protection in harsh environments.

Features	Benefits
Rugged Construction	<ul style="list-style-type: none"> • Tough as the track system it serves
Mild Steel or Stainless Steel Structure, 1,250 or 2,500 lb Capacity, 2' or 4' Live Weighing Rail	<ul style="list-style-type: none"> • Provides variety for almost any requirements
Compact Design	<ul style="list-style-type: none"> • Keeps required head room to a minimum
No Mechanical Adjustments	<ul style="list-style-type: none"> • Low maintenance...no check rods or bumper bolts
Stainless Steel/Hermetically Sealed Load Cells	<ul style="list-style-type: none"> • Provides protection in harsh environments
NTEP Certified Class III, 2500d (COC# 95-144)	<ul style="list-style-type: none"> • Legal-for-Trade applications

Employs Industry Standard Meat Rail

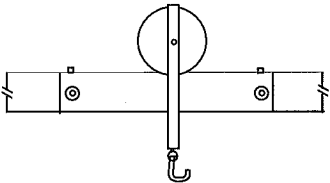

The 0990 Overhead Track Scale package includes two shaft mount hermetic load cells with 30' cable, "live" weighing rail, approach and exit rails, support structure, and an analog or enhanced DigiTOL® summing card in a stainless steel NEMA 4X junction box. The 0990 structure is available with a black epoxy painted finish or 304 stainless steel. The load cells and suspension parts are 17-4 PH stainless steel.

Capacity
1,250 lb
2,500 lb


This product was developed, produced and tested in a Mettler Toledo facility that has been audited and registered according to International (ISO 9001) quality standards.



METTLER TOLEDO

Specifications subject to change without notice.
© 1996 Mettler Toledo, Inc.
METTLER TOLEDO®, DigiTOL®, and Jaguar® are registered trademarks of Mettler Toledo, Inc.
ENABLED™ is a trademark of Allen-Bradley Company, Inc.

Plan View of Monorail Positioned on Track

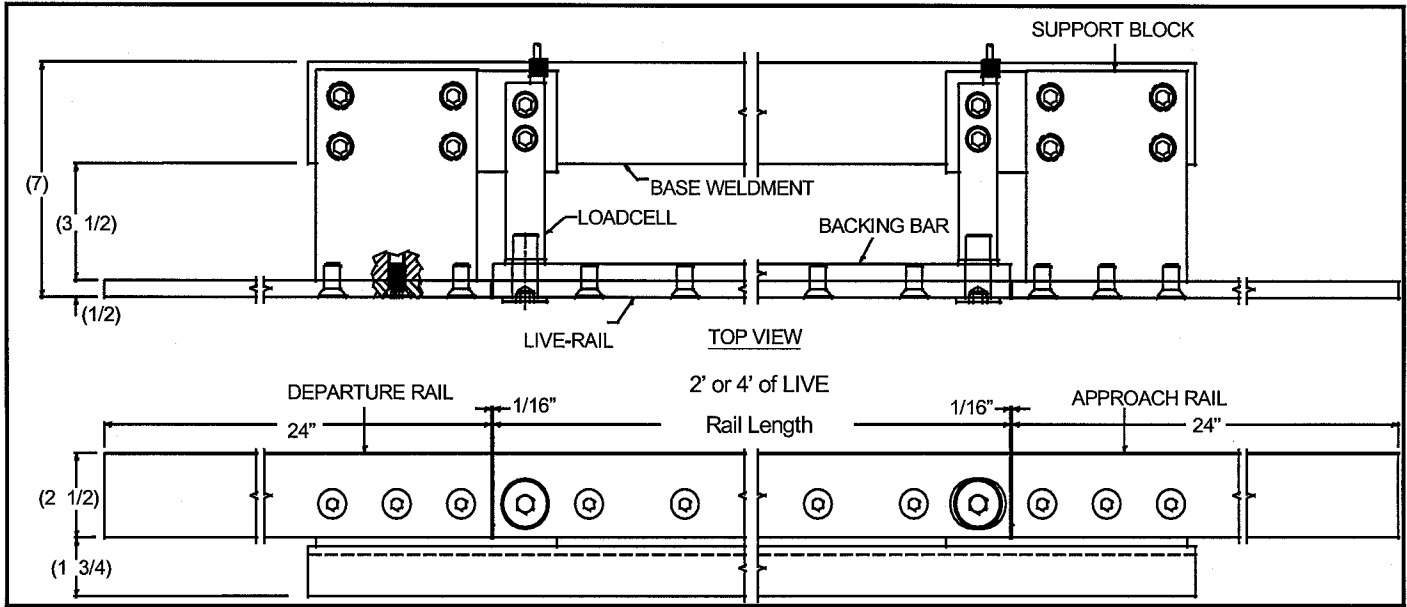

The O990 Monorail Track Scale can be used with the entire line of Mettler Toledo indicators and accessories, including the new Jaguar[®] Industrial Terminal. Through the use of the Jaguar Terminal they may also be ENABLED[™] with technology from Allen-Bradley for direct connection to the remote I/O network. Mettler Toledo is the largest scale manufacturer in the world and has been a major supplier of industrial weighing equipment since the turn of the century. We have authorized sales and service offices throughout the U.S., Canada, and every major part of the world. Contact your nearest authorized distributor for details on Mettler Toledo Monorails...or any other weighing applications.

METTLER TOLEDO

Specifications subject to change without notice.
 © 1996 Mettler Toledo, Inc.
 METTLER TOLEDO[®], DigitOL[®], and Jaguar[®] are registered trademarks of Mettler Toledo, Inc.
 ENABLED[™] is a trademark of Allen-Bradley Company, Inc.