

For the strictest demands

Functional and high-performance



Individual keyboard assignment

With 99 keys, of which 30 are function keys and 69 freely programmable fixed keys, you can adapt the keyboard assignment of the bC-U2 Black store scale to your individual preferences.



Bright display

High-contrast and easy to read: the standard alphanumeric segmented display for article, price and weight indications. The optional high-resolution dot-matrix display supports graphics displays or promotional scrolling text.



High-performance printer

No waiting lines at the sales counter – thanks to fast ticket or label printing at up to 125 millimeters per second.



Seamless hygiene

Smooth surfaces, protected connections, no unnecessary corners and edges, removable and easy to wipe clean Light-Touch keyboard – the daily cleaning of the bC-U2 Black store scale is done quickly by hand.



bC-U2 Black

Ergonomic counter scale in a modern design

The bC-U2 Black counter scale with 99 keys is the first choice for retailers with small to medium product lines. The bC-U2 counter scale from the bC Black model family is distinguished by fast weighing processes and the feel of a classic keyboard. With its timeless elegant Black Line housing, the scale is in perfect visual harmony with a modern store design. The bC-U2 Black counter scale combines simple ergonomic operation and high functionality at the service counter – thereby setting the new standard in its performance class.

METTLER TOLEDO bC-U2 Black

Performance features

- **Multiple functionality – intuitive, easy to operate**
- **High-performance technology – for fast weighing without waiting**
- **Easy maintenance and care – for maximum availability**
- **Simple networking – for the best integrated processes**

bC Black scale family

Rugged. Reliable. Durable. The bC Black scale family combines state-of-the-art weighing technology with tried and tested keyboard operation and is distinguished by fast weighing processes, a wide range of sophisticated functions and many optional extras. The model range covers weighing solutions for all areas of fresh produce – whether at the service counter, in the self-service area or in prepacking.

Technical data bC-U2 Black

Keypad

Patented, removable Light Touch keyboard
 Easy to clean, non-wearing
 99 keys, 30 function keys
 69 freely programmable keys, double assignment possible with Shift key

Display

High resolution back-lit LCD
 Weight: 5 characters
 Tare: 5 characters
 Base price: 7 characters
 Total price: 7 characters
 Text line: 16 alphanumeric characters
 Optional: 240 x 240 dot matrix display

Functions

Service function, prepacking including traceability, cash register drawer, inventory function, large-volume sales, self-service and training function, service function with ticket, label, label and sum label, ticket and article labels, self-adhesive sum tickets

Reporting


Adaptable daily report
 Reporting on two revenue levels
 Electronic sales journal
 Reports per employee, department, category, article, price changes, special offers, transactions

Printers

2-inch printer (54 mm), thermal print strip; tickets/labels/linerless or multipurpose prints, optional: double printer
 Printing speed: up to 125 millimeters/second
 Logo printing on ticket and label
 Freely definable labels and predefined labels
 Printing of EAN13 and GS1-Databar

Modern networking

bC Black store balances can easily be combined to form a virtually unlimited network. PC data processing simplifies central control of information streams.

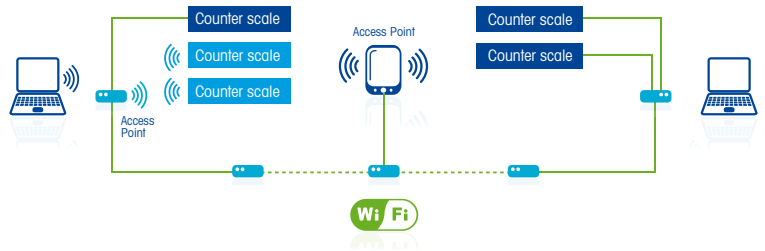

Data storage

3 MB random access memory, optionally expandable up to 8 MB
 4 MB application memory

Secure Weighing

Employee password-protected login
 Electronic journal
 Price changes and sales reports protected by PIN codes

Interfaces and protocols



RJ45, 10Base-T, Ethernet TCP/IP
 1 x serial interface
 1 x RJ11 interface for controlling the cash register drawer
 1 x USB connection
 Integrated wireless solution for wireless data transmission in accordance with IEEE802.11b/g standard (optional)

Housing color

Black

Weighing range	12 kg (66.14 lbs.)	15 kg (26.46 lbs.)	3/6 kg (33.07 lbs.)	6/15 kg (6.61/13.23 lbs.)	30 kg (13.23/33.07 lbs.)
Graduation	2 g (0.07 oz.)	5g (0.18 oz.)	1/2 g (0.035/0.071 oz.)	2/5 g (0.07/0.18 oz.)	5 g (0.18 oz.)
Minimum capacity*	40 g (1.41 oz.)	100 g (3.53 oz.)	20 g (0.71 oz.)	40 g (1.41 oz.)	100 g (3.53 oz.)

Automatic zeroing; *EG: Printout under minimum capacity possible, but not with price marking.

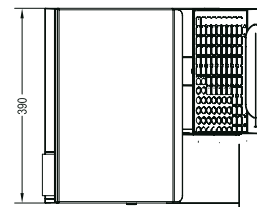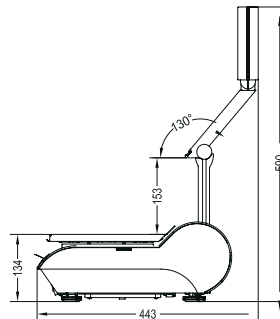

ISO 9001 Quality management certification
 ISO 14001 Environmental management certification
 Internet: <http://www.mt.com>
 Worldwide service

Subject to technical changes.
 ©10/2011 Mettler-Toledo AG
 Printed in Germany 22022259
 Global MarCom Switzerland

www.mt.com/retail

More information

