


INSTALLATION INSTRUCTIONS for 5000TOC Sensor Pipe Mounting Kits

The 5000TOC Sensor can be mounted on either vertical or horizontal pipe. These kits consist of a mounting bracket, (4) mounting screws and (2) U-bolts with nuts, of the size listed in the table. Referring to the illustration below, locate the U-bolts on the pipe, line up the bracket to the appropriate U-bolt size slots, install the nuts and tighten. Do not over tighten and deform the bracket. Mount the 5000TOC Sensor to the bracket with (4) #10-32 screws included with the kit.

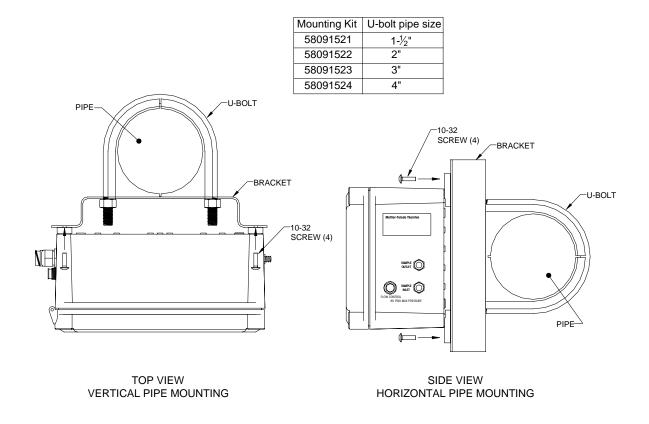

Mettler-Toledo Thornton, Inc. 36 Middlesex Turnpike
Bedford, MA 01730 USA
Tel. +1-781-301-8600
Fax +1-781-301-8701
Toll Free +1-800-510-PURE
thornton.info@mt.com

Part 84462 Rev.C 10/07