


0990 Monorail Overhead Track Scale

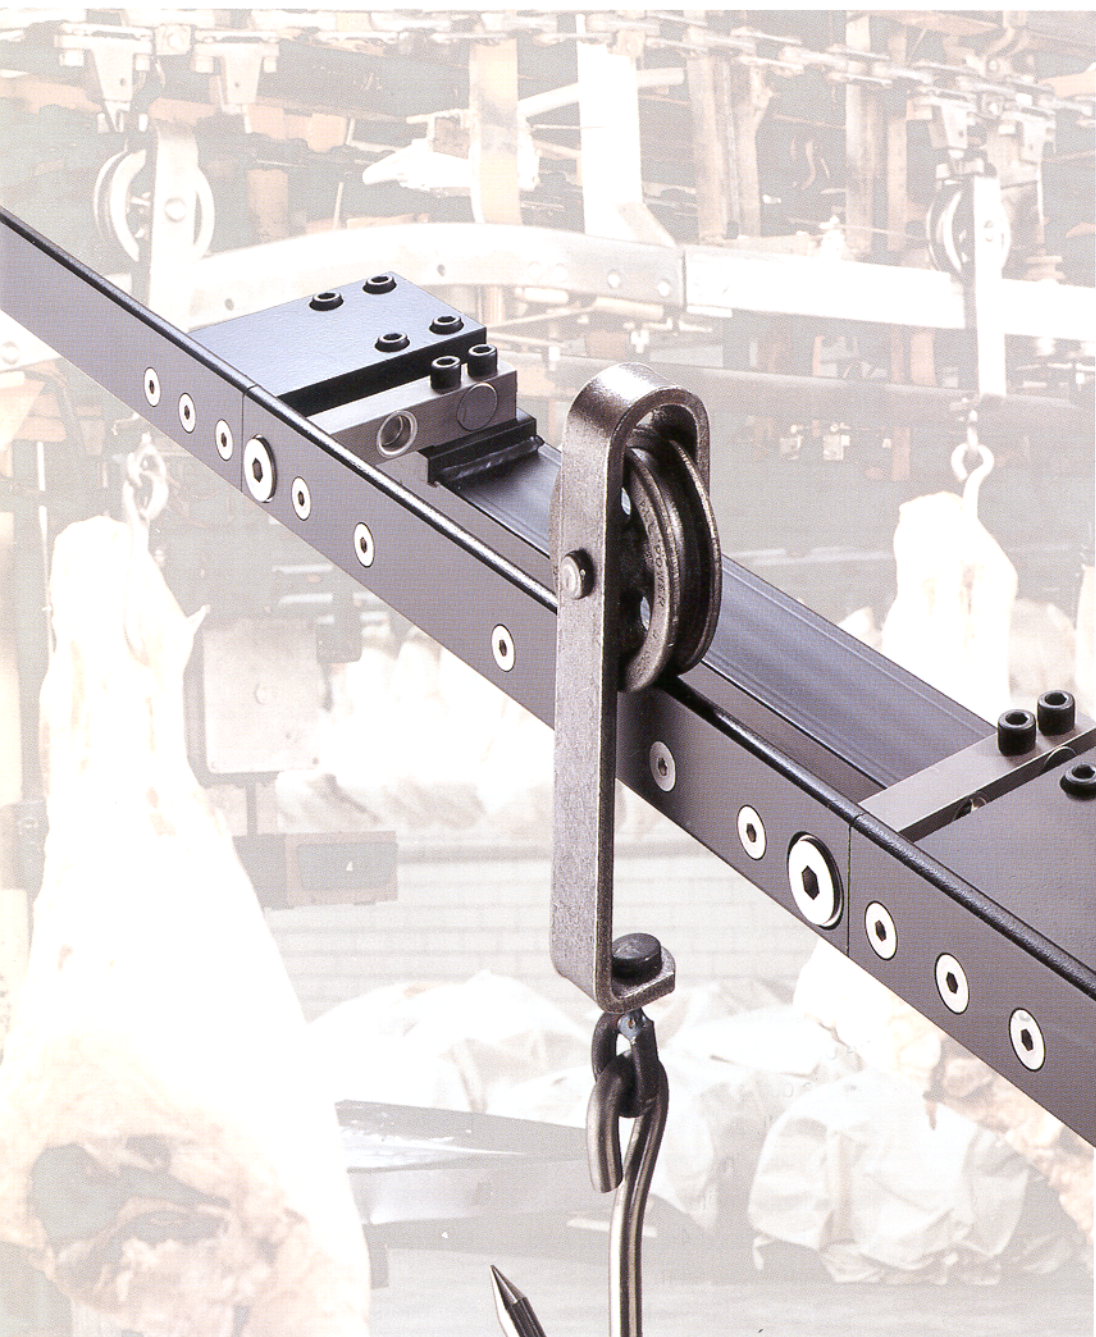

NTEP Certified

Hermetically Sealed
Load Cells Provide
Optimum Protection

Employs Industry
Standard Meat Rail

METTLER TOLEDO

Provides NTEP Certified Performance
in a Robust Self-Contained Design


Monorail Overhead Track Scale with Hermetically Sealed Load Cells Gives Long, Reliable Service



The 0990 Monorail Overhead Track Scale is ideal for beef, pork, and lamb operations that employ overhead rail material handling systems. The 0990 is a self-contained weighing assembly designed for fast, easy installation into a new or existing rail system.

Protected Load Cells

The unit consists of a suspended structure, available in epoxy painted mild steel or stainless steel, using industry standard meat rail. The 0990 features removable approach and exit rails, and a live weighing rail supported by two hermetically sealed load cells, providing protection in harsh environments. The assembly is completely self-contained, with no check rods to adjust.

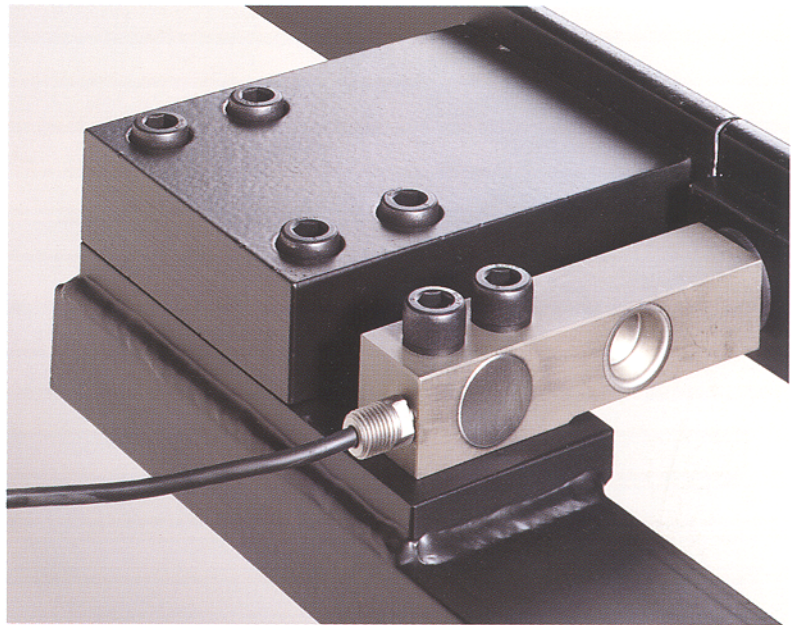

LIVE RAIL WEIGHING CAPACITY

Length	lb	kg	Cell Size
2'	1,250	550	1250 lb
2'	2,500	1100	2500 lb
4'	1,250	550	1250 lb
4'	2,500	1100	2500 lb

Mettler-Toledo, Inc. Scales & Systems

USA
350 W. Wilson Bridge Rd.
Worthington, Ohio 43085

TEL. (800) 786-0038
FAX (614) 438-4783

Mettler-Toledo Inc.

Canada
TEL. (800) 263-6593
FAX (905) 681-1511

Mettler-Toledo Ltd.

Australia
TEL. (61) 3 646 4551
FAX (61) 3 645 3935

International Operations

Americas and Pacific Rim
TEL. (614) 438-4801
FAX (614) 438-4755

Europe, Africa, Near East
TEL. (41) 1 944 22 11
FAX (41) 1 944 30 60

NEMA 4X Junction Box

The stainless steel analog junction box assembly is designed to NEMA 4X standards. Alternate junction boxes are available (consult factory).

NTEP Certified

The 0990 Monorail Overhead Track Scale is designed to meet or exceed the Class III, 2,500d accuracy requirements in accordance with the National Institute of Standards (NIST) Handbook 44. A Certificate of Conformance, Number 95-144, was issued under the National Type Evaluation Program (NTEP) of the National Conference on Weights and Measures.



ISO 9000

This product was developed, produced and tested in a Mettler Toledo™ facility that has been audited and registered according to international (ISO 9001) quality standards.



For questions on Monorail Scales or any weighing application, call your authorized Mettler Toledo distributor.

Specifications subject to change without notice.

© 1995 Mettler-Toledo, Inc.
METTLER TOLEDO™ is a trademark of Mettler-Toledo, Inc.

Printed on recycled paper and is recyclable.

Printed in USA.

20M1295
MONORAIL
MO1006.0E