METTLER TOLEDO


0271 DUAL REMOTE DISPLAYS

MAJOR COMPONENTS:

- 1. BCA SCALE WITH NO BASE-MOUNTED DISPLAY
- 2. REMOTE DISPLAYS:
 - a. (2) WALL MOUNTS or
 - b. (2) SINGLE TOWERS or
 - c. (1) WALL MOUNT, (1) SINGLE TOWER or
 - d. (1) DUAL TOWER

INSTALLATION INSTRUCTIONS:

- 1. REMOVE POWER FROM SCALE BEFORE TAKING ANY STEPS TOWARD ADDING DISPLAYS.
- 2. LOCATE THE I/O CONNECTOR ACCESS UNDER THE SCALE.
- 3. IF THERE IS A BASE-MOUNTED DISPLAY, THIS MUST BE DISCONNECTED.
- 4. RELEASE THE RJ45 "PHONE" STYLE CONNECTOR BY PRESSING DOWN THE TAB.
- 5. CONNECT THE NEW DISPLAYS BY SIMPLY PUSHING THE RJ45 CONNECTOR INTO EITHER DISPLAY CONNECTOR UNTIL IT CLICKS.
- 6. MOUNT THE REMOTE DISPLAYS WHERE DESIRED. (MOUNTING SCREWS NOT PROVIDED.)
- 7. ARRANGE AND SECURE EXCESS CABLE TO ASSURE A SAFE INSTALLATION.

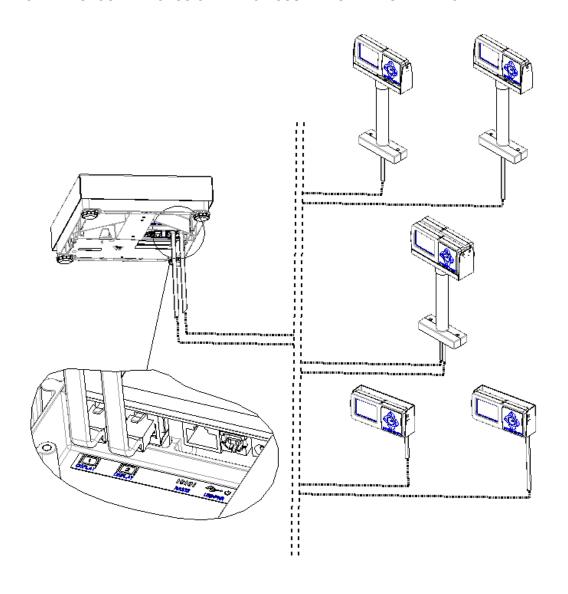

METTLER TOLEDO

