


Accurate Weighing Rugged Construction Reliable Performance

Versatile Connectivity



Global Shipping and Postal Scale

A Balance of Performance and Value

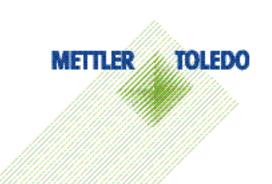

One Scale for All Types of Parcels Optimized for Accuracy and Simplicity

- High accuracy
- Functional durability
- Simple setup and operation
- Flexible communication and configuration



provides both the high-resolution required for envelopes and the capacity for heavy parcels.

Thanks to its multi-range capabilities, a single BC scale can handle all your mail and shipping needs.

Global approvals ensure that the scales are appropriate for use in demanding applications that require high accuracy. Alibi memory is available for European users.











Versatile Communications

Weighing equipment is only as good as its ability to share data. BC scales offer a number of features to ensure errorfree communication of weight data to your shipping software. Communication options include:

- Serial RS-232 supports most carrier protocols
- USB HIDPOS for plug-and-play operation
- Virtual Serial for newer PCs without serial ports
- Keyboard Wedge for communication with any software, such as SAP, without special programming
- Ethernet for cloud- or server-based applications
- Bluetooth for installations where cables are not feasible









Durability

Shipping parcels in mass quantities is a process that requires tough equipment. The BC scales, with their all-metal frames and

heavy-duty overload protection, are tough enough to meet this need. Each scale can handle overloads of 500% of rated capacity without compromising its performance.



The BC scale features adjustable overweight protection stops.



The BC scale is tested at 500% of its capacity.



Simplified Installation, Configuration, and Operation

A start-up wizard facilitates initial installation, prompting for language, geographic location and other parameters. Graphical display and navigational keypad is intuitive for easy set up and operation.

BC scales can be configured for:

- Multiple display types including remote displays
- Special capacity and increment sizes
- Display branding information such as corporate logo

Other functional features include:

- Remote update of scale software
- Better cable management with multiple tie-downs
- Large platter models for oversized parcels
- Application modes, such as counting for bulk mail


Specifications

	Letter & Parcel: Provides high-resolution required for shipping via Global Posts and USPS			Parcel: Superb reliability for retails stores, mail rooms, warehouse packing stations and shipping departments		
Model	BC-15U	BC-3LU	BC-6LU	BC-30U	BC-60U	BC-150U
Capacity	30 lb/15 kg	70 lb/32 or 35 kg	150 lb (lb only)	70 lb/30 kg	150 lb/60 kg	150/300 lb, 60/150 kg
Readability	0-7lb x 0.1oz	0-7lb x 0.1oz	0-10lb x 0.1oz	0.05 lb	0.05 lb	0-150 x 0.05 lb
	7-15lb x 0.2oz	7-70lb x 0.2oz	0-70lb x 0.2oz 0-149lb x 0.5oz	0.01 kg	0.02 kg	0-300 x 0.1lb
	0-3kg x 0.001kg	0-3kg x 0.001kg	0-5lb x 0.005lb			0-60 x 0.02 kg
	3-15kg x 0.005kg	3-15kg x 0.005kg	5-25lb x 0.05lb			0-150 x 0.5kg
		15-35kg x 0.01kg	25-150lb x 0.1lb			
Platter	ABS Plastic, Stainless Steel		ABS Plastic,	ABS Plastic,	ABS Plastic,	Stainless Steel,
Construction			Stainless Steel,	Stainless Steel	Stainless Steel,	Ball Top,
			Ball Top		Ball Top, Roller Top	Roller Top
Dimensions	10.9 x 11.6 in	11.8 x 13.8 in		12.3 x 13.9 in		16.5 x 20.5 in
(flat top)	26.9 x 29.2 cm	29.8 x 34.8 cm		31.2 x 35.3 cm		40.6 x 50.8 cm
Approvals	EC/OIML/NTEP/MC	EC/OIML/NTEP/MC	NTEP/UL	EC/OIML/NTEP/	EC/OIML/NTEP/MC	EC/OIML/NTEP/MC
				MC		
PC Communication*	Standard: USB, RS232, Virtual Serial, Keyboard Wedge			Standard: USB, RS232, Virtual Serial, Keyboard Wedge		
	Optional: Ethernet, Bluetooth, Alibi Memory			Optional: Ethernet, Bluetooth, Alibi Memory		

^{*} All scales include 10 ft/3m. USB cable and 10 ft /3m. RS-232 cable

Scale Versions and Platter Options







BC-30U or -60U with plastic platter



BC-30U or -60U with stainless steel platter



BC-150U with stainless steel platter



BC-150U with roller top platter



BC-150U with ball top platter

Accessories

Displays	Graphical	
	7-segment	
Mounts	Remote wall mount	
	Remote single tower mount	
	Remote dual tower mount	
	Stainless mounting basin for kiosk or counter	
Conveyor	Drop-in kit for BC-150U ball- and roller-top scales	







www.mt.com/ind-BC-scale .

For more information

Mettler-Toledo, LLC 1900 Polaris Parkway Columbus, OH 43240

Tel. 1-866-339-3538

Subject to technical changes © 10/2014 Mettler-Toledo, LLC

MTSI 30234581