Economical and Efficient

Optimized Manual Wrapping



Easy to use

Operators easily wrap packages manually utilizing the Step-Saver's ergonomic design. The Step-Saver is designed for operator efficiency and improved productivity.



Flexibility

Select the controller that is best for your operation. Label printers offer high-resolution graphic capabilities for quality label display. Integrated software help manage inventory tracking.



Hygienic design

Stainless steel construction offers durability and enhanced food safety. The Step-Saver is easy to clean and maintain.



Step-Saver Hand Wrapping Station

Manual wrapping system

The METTLER TOLEDO Step-Saver Hand Wrapping Station is designed for all backroom prepacking needs. From the processing of packages too large to go through the automatic wrappers, to a secondary system for the busiest retailers, the Step-Saver will boost productivity, save money, and save space.



- Rugged efficiency with stainless steel construction
- Versatility with 60 lb. weighing capacity
- Easy cleaning and open design
- Simple and fast loading of film rolls

Satisfying All Production Needs

The Step-Saver Hand Wrapping Station outfitted with a controller and label printer is the perfect solution for low-volume daily weigh, wrap and label needs. For larger retailers, the Step-Saver is an excellent backup system to handle peak shopping hours.



Step-Saver Hand Wrapping Station shown with 840 Manual Label Printer with shelf support leg configuration

Technical data

Step-Saver Hand Wrapping Station

Film Capacity

Two rolls, up to 20 in. (50.8 cm) wide

Film Type

PVC Stretch

Bottom Seal

Thermostat controlled sealing plate with nonstick cover

Film Cutting

Thermostat controlled low temp rod

Electrical

115 VAC 60 Hz, Single Phase 10 A 625 Watts (excluding scale and printer)

Construction

Stainless steel with folding shelves

System Weight

120 lb.

Operating Range


40° F-95° F (5° C-35° C)


Options

Stainless steel 12 in. × 24 in. platter shelves (left-right) Universal swivel shelf Label dispenser rack Commodity rack Shelf support leg

Compatible Controllers

840 Manual Label Printer Impact M Printer-Weight Indicator Impact S Printer-Weight Indicator bPro Printer-Weight Indicator UC-CW Printer-Weight Indicator

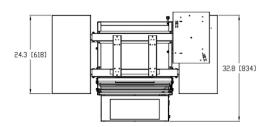

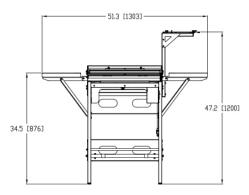

Dimensions in inches (cm)

www.mt.com/retail.

For more information



ISO 9001 quality management certification ISO 14001 environmental management certification

Subject to technical changes.

© 6/2018 Mettler-Toledo, LLC
Printed in USA 30327507
Global MarCom Switzerland

