

JAGXTREME®

Scale Terminal



**Harness the power and flexibility
of the Internet.**

METTLER TOLEDO

Achieve Higher Levels of Functionality and Interoperability

The JAGXTREME terminal is METTLER TOLEDO's most advanced scale terminal, designed specifically to help companies provide cost-effective, flexible methods of production while minimizing engineering time and effort. Unlike terminals that rely on proprietary technology, the internet-enabled JAGXTREME terminal incorporates industry standard connectivity to facilitate communication and data exchange with companies' control, manufacturing execution, and enterprise systems.

It is the first industrial weighing solution to integrate information, equipment life cycle management, and automation control into the manufacturing enterprise — and the only one that enables you to weigh fast, weigh powerful, and weigh cool.



The JAGXTREME terminal's TraxEMT™ lowers the cost of ownership by embedding a virtual METTLER TOLEDO technician into every JAGXTREME terminal.

weigh fast.



The JAGXTREME terminal is configurable to provide high functionality at an economical value.

Leading Automation Technology

With a faster processor and more memory than standard terminals, the JAGXTREME terminal is fast. But what makes it really fast — from installation to commissioning — are the benefits offered by its leading sensor technology, resident engineering tools, and open system architecture.

With its multiprocessor technology and high-speed, three-stage, digital tracking filter, TraxDSP™, the JAGXTREME terminal provides quick weight response — even while mixing or agitating on up to four simultaneous scales. The result is more accurate weights, more throughput, and more satisfaction in your weighing system.



Open Connectivity

The JAGXTREME terminal's embedded web server harnesses the power of the Internet, taking weighing and measuring to a new level.

The JAGXTREME terminal offers connectivity to all METTLER TOLEDO technologies and to the leading industry technologies. Just install it, configure it, select the communication media and appropriate protocol, and start accessing valuable process signals. If you have a custom protocol or the weighing application requires special controls, use the JAGXTREME terminal's resident engineering tools, such as the JagBASIC programming language or data templates, to create it yourself.

Ethernet/IP

The JAGXTREME terminal is the first weigh scale terminal based on the new industrial networking protocol — Ethernet/IP. The Ethernet/IP protocol provides plug-and-play interoperability among Ethernet products from multiple vendors and real-time messaging for industrial control applications. The result is fast, smooth installation and seamless integration of your process control systems.

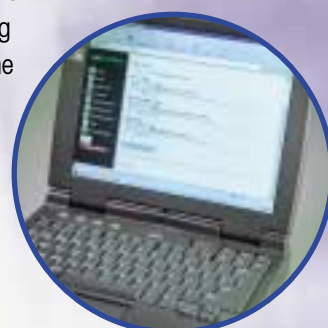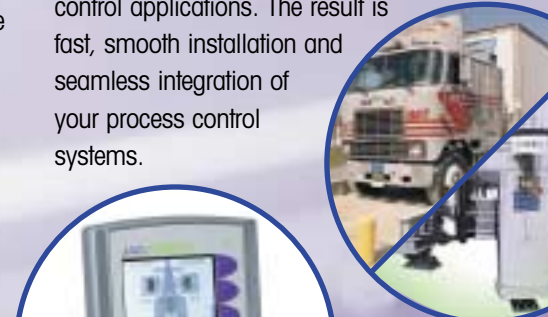

weigh powerful.

High Performance Maintenance

The JAGXTREME terminal is the first weighing solution to employ predictive failure analysis. Using TraxEMT™, METTLER TOLEDO's exclusive Embedded Maintenance Technician, the JAGXTREME terminal can:

- Schedule and track its own maintenance
- Maintain ISO calibration compliance
- Predict failures before they occur, and alert designated individuals of potential failures or maintenance needs by email.
- Perform fault recognition and recovery when combined with METTLER TOLEDO's RAAD (Remote Addressable A/D) Box™.

More Memory

The JAGXTREME terminal also offers more space for custom programs, data and software options. It is completely compatible with its predecessor, METTLER TOLEDO's top-selling JAGUAR terminal, so customers can easily upgrade their existing JAGUAR terminals into high performance JAGXTREME terminals.



Upgrade your existing JAGXTREME terminals with a pedestal or panel mount JXOI operator interface. The JAGXTREME harsh environment is also available with a self-contained operator interface.

weigh cool.

Global Communication

The JAGXTREME terminal bridges the islands of automation with open connectivity. Because it uses Ethernet — the leading network hardware platform, it is easy to connect to any local area network (LAN) or wide area network (WAN) and allow the sharing of information inside and outside of the enterprise.

- Surf the JAGXTREME terminal with the embedded web server and make changes to product configuration, run diagnostics, or perform maintenance via the network or through a phone using a standard modem.
- Launch JagXFILESTM to view and set up a virtual JAGXTREME terminal's configuration. Then save the file and load it into a real JAGXTREME terminal any where in the world simply by browsing with Internet Explorer.
- Receive email alerts when the terminal requires maintenance.
- Exchange valuable information from one piece of equipment to another within the same facility or between facilities thousands of miles apart.
- Look at your applications in a new way with the JAGXTREME JXOI (operator interface). You can configure the operator interface panels to meet your specific needs with easy-to-use XTREMEBUILDER™ software. Choose from a library of objects that allow the graphical display of system information using bar graphs, bitmaps, and simple animation. Simply drag an object onto the WYSIWYG screen, edit the properties, then download it to the JAGXTREME JXOI.
- The JAGXTREME terminal's hybrid technology connects to more scale sensors, peripherals, printers, and control systems than any other scale terminal on the market.



The JAGXTREME terminal is available in five enclosure styles and with a variety of options.

| Model Specifications | General Purpose | Panel Mount | Panel Mount – Blind Chassis | Harsh Environment/Harsh with Graphical Display |
|------------------------|--|--|---|---|
| Dimensions | 12.45 in (25 cm) wide x 7.86 in (20 cm) high x 10.6 in (27 cm) deep | 10.05 in (25.5 cm) x 5.6 in (14 cm) at front of the terminal 9.5 in (24 cm) x 4.91 in (12.5 cm) at the rear 8.03 in (21 cm) deep | 10.75 in (27 cm) x 4.31 in (10.9 cm) at base 10.25 in (26 cm) x 3.91 in (10 cm) c-c mounting 9.5 in (24.1 cm) x 5.00 in (13 cm) chassis | 9.42 (23.93 cm) x 11.12 in (28.24 cm) x 9 in (22.86 cm) |
| Construction | Aluminum | | | Stainless steel |
| Mounting Options | Column, desktop | Panel | Blind panel | Wall, column |
| Degree of Protection | CERTIFIED TYPE 4 | CERTIFIED TYPE 5 (front panel) | CERTIFIED TYPE 1 | CERTIFIED TYPE 4X |
| Ethernet Connection | 10BASE-T. Uses crossover cable from RJ-45 Ethernet port on the back of the JAGXTREME terminal to a PC (point-to-point connection) or standard cable to connect to other equipment through a hub | | | |
| Attachable Platforms | 4 analog or 4 POWERCELL® or 2 High Precision or 2 DigiTOL® | | | |
| Display | Two vacuum fluorescent displays. Upper display: 7 segment 0.5" (13 mm); lower display: 16-character, 5 x 7 dot matrix display 0.25" (6 mm) | | | |
| Keypad | 4 x 5 matrix tactile-feel keypad with 0-9, letters A-Z, and function keys | | | |
| Interfaces | Ethernet, serial, discrete, PLC network | | | |
| A/D Rate | >300 per second | | | |
| Digital Input/Output | Maximum 12 in/12 out | | | |
| Maintenance Monitoring | TraxEMT™ Embedded Maintenance Technician system for self-diagnosis and predictive failure analysis | | | |
| Signal Processing | TraxDSP™ three-stage filtering | | | |
| Power Requirements | 85 to 264 VAC, with a line frequency of 47 to 63 Hz | | | |
| Setup | Via embedded web server, with the front keypad or using the JagXFILES tool box | | | |
| Scripting Language | JagBASIC (standard) | | | |
| Operating Temperature | 14°F to 113°F (-10°C to 45°C) at 10% to 95% relative humidity, non-condensing | | | |
| Storage Temperature | 40°F to 140°F (-40°C to 60°C) at 10% to 95% relative humidity, non-condensing | | | |
| Options | Analog, Dual Analog, Analog Reduced Excitation, Dual Analog Reduced Excitation, Dual Analog Output, Modbus Plus, Profibus, A-B RIO, Multifunction I/O, IDNet, POWERCELL, PCJagBASIC EDITOR, JAGMAX Truck Scale Software, HMI Pedestal or Panel, ControlNet/Ethernet IP | | | |
| Approvals | <p>CE Conformity 90/384/EU — Non-automatic Balances and Scales EN45501:1992 — Adopted European Standard 89/336/EU — EMC Directive Weights and Measures (US) Class III or IIIL devices NTEP Certificate of Conformance No. 94-096 Weights and Measures (Canada) 10,000 division rating and approval AM-5041 Weights and Measures (Australia)</p> <p>Class III and IIIL non-automatic weighing instruments as defined in the National Standards Commission, Document 100</p> | | | |



| | TEL | FAX | | TEL | FAX | |
|-----------------------|-------------------------------------|--------------------|-------------------------------------|---------------------|--|--|
| METTLER TOLEDO | Australia (61-3) 9644 5700 | (61-3) 9645 3935 | Korea (82-2) 518-2004 | (82-2) 518-0813 | Internet | |
| | Austria (43-1) 604 1980 | (43-1) 604 2880 | Malaysia (603) 70421773 | (603) 7031772 | www.mt.com | |
| USA and Canada | Belgium (32-2) 334 0211 | (32-2) 378 1665 | Mexico (52-5) 547 5700 | (52-5) 541 2228 | Specifications subject to change without notice. | |
| 1900 Polaris Parkway | Brazil (55-11) 421 5737 | (55-11) 7295-1692 | Netherlands (31-344) 638363 | (31-344) 638390 | © 2001 Mettler-Toledo, Inc. | |
| Columbus, Ohio 43240 | China (Industrial) (86-519) 6642040 | (86-519) 6641991 | Norway (47-22) 30 44 90 | (47-22) 32 70 02 | METTLER TOLEDO® and JAGXTREME® are registered trademarks of Mettler-Toledo, Inc. | |
| TEL (800) 523-5123 | Croatia (385-1) 23 36 317 | (385-1) 23 04 147* | Poland (48-22) 651-9232 | (48-22) 651-7172 | | |
| (614) 438-4511 | Czech Republic (420-2) 254962 | (420-2) 24247583 | Russia (7-095) 921 9211 | (7-095) 921 6353 | | |
| FAX (614) 438-4900 | Denmark (45-43) 27 08 00 | (45-43) 27 08 28 | Singapore (65) 8900011 | (65) 8900012 | | |
| | France (33-1) 30 97 17 17 | (33-1) 30 97 16 16 | Slovak Republic (421-7) 43 42 74 96 | (421-7) 43 33 71 90 | | |
| | Germany (49-641) 50 70 | (49-641) 52951 | Slovenia (386-61) 162 1801 | (386-61) 162 1789* | | |
| Headquarters | Hong Kong (852) 2744 1221 | (852) 27446878 | Spain (34-93) 223 2222 | (34-93) 223 0271 | | |
| 8606 Greifensee | Hungary (36-1) 257 9889 | (36-1) 256 2175 | Sweden (46-8) 702 50 00 | (46-8) 642 45 62 | | |
| Switzerland | India (91-22) 857-0808 | (91-22) 857-5071 | Switzerland (41-1) 944 45 45 | (41-1) 944 45 10 | | |
| | Italy (39-02) 333321 | (39-02) 356-2973 | Taiwan (886-2) 2579-5955 | (886-2) 2579-5977 | Printed in USA. | |
| TEL (41-1) 944 22 11 | Japan (81-6) 6949-5901 | (81-6) 6949-5944 | Thailand (66-2) 719 6480 | (66-2) 719 6479 | | |
| FAX (41-1) 944 30 60 | Kazakhstan (7-3272) 50 63 69 | (7-3272) 60 88 35 | United Kingdom (44-116) 235 7070 | (44-116) 236 6399 | 5M1101 | |
| | | | | | INDICATORS | |
| | | | | | INO3341.2E | |

*Call for fax.