oc Black Line

Compact format

Space-saving and high-performance



Bright display High-contrast and easy to read: the standard alphanumeric LCD segmented display for article, price and weight indications. The optional high-resolution dot-matrix display supports graphics displays or promotional scrolling text.

User-friendly operation

With 56 keys, of which 30 are function keys and 26 are freely programmable fixed keys, you can adapt the key assignment of the bC-C2 Black compact scale to your individual preferences. The wearfree Light-Touch-keyboard is easy to operate, label and clean.

High-performance printer

No waiting lines at the sales counter thanks to fast ticket or label printing at up to 125 millimeters per second. With a minimum of manual actions: convenient paper change for smooth operation practically without interruption.

Easy networking

No unnecessary redundant work: whether it's price changes, reconciliation with goods management or automatic totaling of sales - with its interface versatility and easy networkability, the bC Black family of scales saves you time and money.



and labeling

The bC-C2 Black compact scale is distinguished by fast weighing processes and the feel of a classic keyboard. The flat and compact design of the bC-C2 Black saves space at the sales counter, creates no visual barriers for the customer and offers your employees easy and quick access to the full range of products at the sales counter. The durability and ease of operation of the bC-C2 Black compact scale also make it the ideal companion for product preparation in production or price marking in backroom operations.



METTLER TOLEDO bC-C2 Black

Performance features

- Compact, flat design free of barriers and taking up minimal space
- Easy to read and to operate for quick weighing without waiting
- Easy maintenance and care for maximum availability
- Simple networking for the best integrated processes

bC Black scale family

Rugged. Reliable. Durable. The bC Black scale family combines state-of-the-art weighing technology with tried and tested keyboard operation and is distinguished by fast weighing processes, a wide range of sophisticated functions and many optional extras. The model range covers weighing solutions for all areas of fresh produce – whether at the service counter, in the self-service area or in prepacking.

Technical data bC-C2 Black

Keypad

Patented, removable Light Touch keyboard Easy to clean, non-wearing 56 keys, 30 function keys 26 freely programmable fixed keys

Display

High resolution back-lit LCD Weight: 5 characters Tare: 5 characters Base price: 7 characters Total price: 7 characters Text line: 16 alphanumeric characters Optional: 240 x 240 dot matrix display

Functions

Operating functions, prepacking including traceability, cash register drawer, inventory function, high-volume sales, self-service and training function, service function with tickets, labels, label and sum label, ticket and article labels, self-adhesive sum ticket

Reporting


Adaptable daily report Reporting on two revenue levels Electronic sales journal Reports per employee, department, category, article, price changes, special offers, transactions

Printers

2-inch printer (54 mm), thermal print strip; tickets/labels or multipurpose prints Printing speed: up to 125 millimeters/second Logo printing on ticket and label Freely definable labels and predefined labels Printing of EAN13 and GS1-Databar

Modern networking

bC Black store balances can easily be combined to form a virtually unlimited network. PC data processing simplifies central control of information streams.

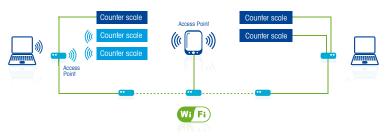

Data storage

3 MB random access memory, optionally expandable up to 8 MB 4 MB application memory

Secure Weighing

Employee password-protected login Electronic journal Price changes and sales reports protected by PIN codes

Interfaces and protocols

RJ45, 10Base-T, Ethernet TCP/IP

1 x serial interface

1 x RJ11 interface for controlling the cash register drawer

1 x USB connection


Integrated wireless solution for wireless data transmission in accordance with IEEE802.11b/g standard (optional)

Housing color

Weighing	12 kg	15 kg	3/6 kg	6/15 kg	30 kg
range	(26.46 lbs.)	(33.07 lbs.)	(6.61/13.23 lbs.)	(13.23/33.07 lbs.)	(66.14 lbs.)
Graduation	2 g	5 g	1/2 g	2/5 g	5 g
	(0.071 oz.)	(0.18 oz.)	(0.035/0.071 oz.)	(0.071/0.18 oz.)	(0.18 oz.)
Minimum	40 g	100 g	20 g	40 g	100 g
capacity*	(1.41 oz.)	(3.53 oz.)	(0.71 oz.)	(1.41 oz.)	(3.53 oz.)

Automatic zero setting

* EG: Printout under minimum capacity possible, but not with price marking.

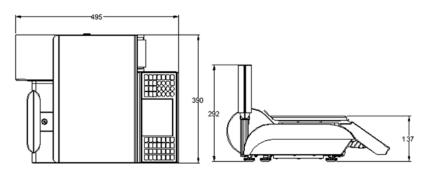



ISO 9001 Quality management certification ISO 14001 Environmental management certification Internet: http://www.mt.com Worldwide service

Subject to technical changes. ©10/2011 Mettler-Toledo AG Printed in Germany 22022271 Global MarCom Switzerland www.mt.com/retail

More information

