

Commercial Duty – Shipping Dock Scale

The METTLER TOLEDO VLX floor scale is fully electronic, portable, and has a low profile...making it ideal for freight consolidators, forwarders, small processing plants, resellers, shipping and receiving departments, and start-up businesses. Its low-profile design minimizes operator effort when loading the scale platform. Installation is easy...no service is required when you choose the pre-calibrated option. Units are completely self-contained. The VLX floor scale can interface with all METTLER TOLEDO analog instruments and accessories.

Specifications	1000 lb	2500 lb	5000 lb
Platform Size (feet/mm)	3' x 3', 4' x 4' (914 x 914, 1219 x 1219 mm)	3' x 3', 4' x 4' (914 x 914, 1219 x 1219 mm)	4' x 4' (1219 x 1219 mm)
Platform Height	4" (102 mm)	4" (102 mm)	4" (102 mm)
Shipping Weight (lb/kg)	250 – 385 lb (114 – 175 kg)	250 – 385 lb (114 – 175 kg)	385 lb (175 kg)
Standard Operating Temperature	-10°C to 40°C (50°F to 104°F)		
Construction	Laser-Cut, Box-Formed, and Epoxy-Painted mild steel, safety tread plate		
Compatible Instruments	HAWK™, PANTHER®, LYNX®, JAGUAR®, JAGXTREME™, PUMA®, ID7, ID1-A		


Options:

- Factory pre-calibrated for drop shipment to end-user and immediate installation with:
- METTLER TOLEDO® HAWK™ desktop instrument
- METTLER TOLEDO® HAWK™ SS harsh instrument
- Ramp accessible on all four sides

Features	Benefits
Rugged industrial construction	■ 100% end loading; ideal for weighing skids and totes on the shipping dock.
Hermetically sealed, stainless steel load cells	■ Provides maximum protection in tough environments.
Threaded foot with ball-and-cup suspension	■ A proven solution for easy installation and portability.
Safety tread plate	■ Minimizes risk of slipping on the scale.
Top deck leveling holes	■ Makes it easy to level the scale on uneven floors – by adjusting the feet from the top with a screwdriver.
NTEP Certified for Class III, 5000d	■ Legal-for-trade applications. ■ COC #99-132A1

METTLER TOLEDO is the largest scale manufacturer in the world and has been a major supplier of industrial weighing equipment for more than 100 years. We have authorized sales and service offices throughout the U.S., Canada, and every major part of the world. Contact your local METTLER TOLEDO authorized distributor or sales office for further information. Or visit our website: www.mt.com/industrial.

**Rugged,
High-Quality,
Low-Profile,
Commercial Duty
Floor Scale**

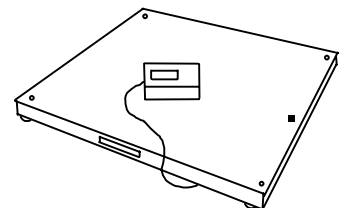

Produced in a Facility that is

