Weigh-price terminal

for high duty manual applications



Unique interface

All the Etica industrial products have an exceptionally intuitive graphical interface. The icons are easy to learn and the menus simply guide operators through processes quickly.



Comprehensive

The extensive configurable weighprice labelling features of the Etica product line meet every need. There are almost no limits with the Etica's simple, yet comprehensive, PLU, order and label management system.



Printing versatility

The Etica 7000 can control several printers, producing labels as well as reports. Connecting to commercially available printers opens the possibility to a wide range of printing options e.g. thermal transfer, high resolution, wide labels....



Flexible solutions

The Etica 7000 is compatible with a wide range of METTLER TOLEDO IDNet scale platforms. No matter the size or precision requirement, the Etica 7000 has a solution that fits the application.



Etica 7000

The Etica 7000 is a weigh-price terminal providing all the functionality of the Etica product line in an IP54 enclosure.

With the extensive configurable weigh-price labelling features, a robust, 100% stainless steel chassis and connectivity to commercially available printers, this weigh-price terminal will satisfy the most demanding requirements. Operators effortlessly use the "intuitive" icons and menus to set up orders, PLUs and design labels. Required changes are completed with just a few presses of the touchscreen display.

The wide choice of METTLER TOLEDO scale bases, additional printers and hand held barcode readers, make sure the Etica 7000 solution fits any requirements.



Technical data

Etica 7000

Terminal for weigh-price labelling

Application features

- Up to 30 000 PLU items.
- 10 000 characters per ingredient list per PLU
- 255 tares, 4 programmable dates
- 4 levels of totals
- 3 levels of PLU classification (departments, families, and groups)
- Weight and tare up to 5 characters
- Price per article up to 8 characters
- Printed payment price up to 9 characters
- Libraries for texts, ingredients, and label layouts
- Integrated label editor
- On screen help messages
- Tracing incoming items with automatic barcode entry
- · Effortless handling of a large amount of text through full screen display
- Simple on screen methods for handling article re-labelling, loss, return and cancellation
- Modes include variable weight/price, fixed weight, fixed price as well as no weight
- Multiple country prices and languages
- Printing of labels with manual fixed weight entry
- Printing and reading of barcodes EAN8, 13, 14, codes 39, 93, 128, ITF, UPC-A, UPC-E and 2/5 interleafed, EAN128 and PDF417
- · Totals printed on labels by external printer

Data Management

- Advanced statistical functions
- Client database
- Order management
- Configurable reporting capabilities
- Event logs

User interface

- Intuitive programming through graphical display
- 40 keys + integrated virtual keyboard
- Keyboard ergonometrically oriented towards user
- 10.4" touch screen SVGA TFT color display

Data storage and memory

- 512MB RAM
- 40GB Mass Storage
- Limitless number of logos and label definitions

Interfaces and host communication


- Interfaces: RS232, Ethernet (10baseT) TCP/IP, 2 x USB and RS485 (optional)
- Host communication (batch) through METTLER TOLEDO ETITRANS
- "Real time" host communication through METTLER TOLEDO WALIS

Security

- · Menus password protected
- Data security by storing data on a remote device
- Level defined operator passwords

Materials

- 100% ball blasted stainless steel
- Keyboard and housing IP54 protected.

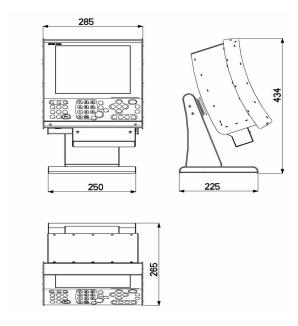

Weight	3/6kg	6/12kg	6kg	12kg	15kg	6/15kg	30kg
Precision	1g/2g	2g	2g	2/5g	5g	2g/5g	5g
Min. weight	20g	40g	40g	40g	100g	40g	100g

Tare compensation on all the ranges

See your METTLER TOLEDO representative for alternative scales up to 600kg

Printing

- Support for various fonts and character sets (Cyrillic, Arabic, Chinese, Greek)
- Printing of multiple logos
- Connection to external printers

Options include:

- Scale base with METTLER TOLEDO IDNet
- Interface RS485
- External printers
- Hand held barcode readers



Quality certificate ISO 9001
Environment certificate ISO 14001
Internet: http://www.mt.com
Worldwide service

Subject to technical changes © 12/2007 Mettler-Toledo EPEC Printed in Germany Ref: 292 30 662 - v1.6