

Intuitive and Trend-Setting

The Powerhorse for the Sales Counter



Professional Advice

Whether providing hygiene information, keeping staff up-to-date with new regulatory policies, providing expert advice about recipes, or offering information about ingredients and their origin: the touchscreen is the perfect platform for innovative staff training and providing customers with valuable tips during the sales process.



Visual Sales Promotions

Stimulate targeted purchase incentives for lucrative extra revenue – in both food and non-food areas. Whether gourmet week, salad dressing tips, or a tasting tour: with the bright customer display, the UC-CWQ Evo CT whets your customers' appetites for your products.



Self-Service Weighing

Build loyalty with customer-friendly self-service solutions. The large color touchscreen and graphical user interface offers customers the ultimate in convenience when choosing products. This means fast and problem-free weighing even at peak times, resulting in a more pleasing shopping experience.



Optional Barcode Scanner

The UC-CWQ Evo CT is available with an optional barcode scanner which can capture the GS1 Databar as well as most other standard barcodes. Barcode scanning virtually eliminates product identification errors and allows the retailer to link multiple vendors to the same PLU, improving support of inventory/category management and traceability initiatives.



UC-CWQ Evo CT

High-End PC-Based Scale with Touch-Screen Control for High Counters

The intuitive UC-CWQ Evo CT scale is the ideal choice for companies looking for a high performance and slimline counter scale for the most stringent demands. You can use the bright touchscreen in hygiene and sales training sessions for your staff or exploit the benefits of real-time access to information databases, which can help you increase your staff's selling and advisory skills at the service counter. User-friendly, interactive and highly accurate, the UC-CWQ Evo CT opens the door to a new level of self-service shopping for customers.

- **Excellent ergonomics – adjustable touchscreen and customer display**
- **Bright customer display – visual sales promotion in compact format**
- **User-friendly self-service**
- **Efficient business processes – seamless integration into goods management**

UC-CWQ Evo CT in self-service mode with optional Smart Scan barcode scanner



For the most stringent demands

The UC Evo Line is the PC-based range of METTLER TOLEDO scales for the most demanding requirements. The UC Evo Line supports a wide variety of fresh food and also CPU-intensive applications, such as multimedia sales promotions at the point of sale. The UC Evo Line impresses with its easy networkability and support for third-party applications.

Technical data UC-CWQ Evo CT

Mode

Operator mode
Self-service mode

Touchscreen

Operator display 12.1" (30.7 cm) TFT LED SVGA Color
Customer screen 5.7" (14.5 cm) TFT LED SVGA Color
Touch-sensitive touchscreen; backlit LED technology
Adjustable tilt angle
Screen resolution: 800 x 600 pixels
32-bit color depth

Printer options

Effective print width: 2.83" (72 mm)
Max paper width: 3.3" (85 mm)
Printing speed: up to 5"/second
Print resolution: 200 dpi
Logo printing on label
Printing of upper and lower case characters
Large selection of Windows® fonts
Freely definable labels
6" roll capacity

Data storage

160 GB or larger SATA hard drive
2 GB RAM
8 GB SSD (optional)

Interfaces and protocols

TCP/IP Ethernet interface (10/100)
1 x RS232 serial interface
2 x USB 2.0 connections
Integrated wireless solution for wireless data transmission according to IEEE 802.11 a/b/g/n standard (2x2 MIMO optional)

Processor

1.86 GHz ATOM D2550 Dual Core

Optional Barcode Scanner

Honeywell MS4980 Vuquest

Remote maintenance and data communication

InTouch™ Remote Services
FTP (File Transfer Protocol)
VNC (Virtual Network Computing)

Operating system

Windows® Embedded Standard 7 or Linux openSUSE 12.1

Base Construction

Aluminum Die Cast with sheet metal bottom

Platter Dimension

W: 15.75" x D: 9.75"



Weight of Unit

30 lb (13.6 kg)

Shipping Weight

40 lb (18.2 kg)

Dimensions (mm)

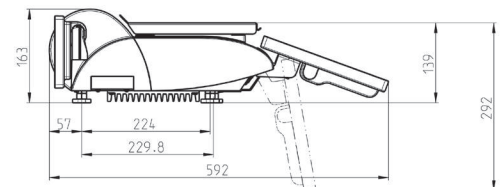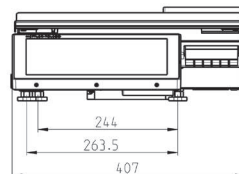

ISO 9001 quality management certification
ISO 14001 environmental management certification
Internet: <http://www.mt.com>
Worldwide service

Subject to technical changes.
© 10/2014 Mettler-Toledo, LLC
Printed in USA RT1246.2E
Global MarCom Switzerland

www.mt.com/retail

For more information